

AUTOMATEC
C'EST FLUIDE CONTRÔLE

NOCTAN
AUTOMATISMES ET
CONTRÔLE DES FLUIDES



**MESURE REGULATION
HYDRAULIQUE
PNEUMATIQUE
ROBINETTERIE**

LE SPÉCIALISTE DU CONTRÔLE DES FLUIDES

Pneumatic Modulelevel® & APM Controllers

Installation and Operating Manual



*Liquid
Level
Control*

Read this Manual Before Installing

This manual provides information on F10 and F50 Flow Switches. It is important that all instructions are read carefully and followed in sequence. Detailed instructions are included in the Installation section of this manual.

Conventions Used in this Manual

Certain conventions are used in this manual to convey specific types of information. General technical material, support data, and safety information are presented in narrative form. The following styles are used for notes, cautions, and warnings.

Notes

Notes contain information that augments or clarifies an operating step. Notes do not normally contain actions. They follow the procedural steps to which they refer.

Cautions

Cautions alert the technician to special conditions that could injure personnel, damage equipment, or reduce a component's mechanical integrity. Cautions are also used to alert the technician to unsafe practices or the need for special protective equipment or specific materials. In this manual, a caution box indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Warnings

Warnings identify potentially dangerous situations or serious hazards. In this manual, a warning indicates an imminently hazardous situation which, if not avoided, could result in serious injury or death.

Safety Messages

Follow all standard industry procedures for servicing electrical equipment when working with or around high voltage. Always shut off the power supply before touching any components.

WARNING! Explosion hazard. Do not connect or disconnect equipment unless power has been switched off or the area is known to be non-hazardous.

Low Voltage Directive

For use in Installation Category II. If equipment is used in a manner not specified by the manufacturer, protection provided by the equipment may be impaired.

Notice of Trademark, Copyright, and Limitations

Copyright © 2006 Magnetrol International, Incorporated. All rights reserved.

Magnetrol reserves the right to make changes to the product described in this manual at any time without notice. Magnetrol makes no warranty with respect to the accuracy of the information in this manual.

Warranty

All Magnetrol/STI mechanical level and flow controls are warranted free of defects in materials or workmanship for five full years from the date of original factory shipment.

If returned within the warranty period; and, upon factory inspection of the control, the cause of the claim is determined to be covered under the warranty; then, Magnetrol/STI will repair or replace the control at no cost to the purchaser (or owner) other than transportation.

Magnetrol/STI shall not be liable for misapplication, labor claims, direct or consequential damage or expense arising from the installation or use of equipment. There are no other warranties expressed or implied, except special written warranties covering some Magnetrol/STI products.

Quality Assurance

The quality assurance system in place at Magnetrol/STI guarantees the highest level of quality throughout the company. Magnetrol/STI is committed to providing full customer satisfaction both in quality products and quality service.

Magnetrol's quality assurance system is registered to ISO 9001 affirming its commitment to known international quality standards providing the strongest assurance of product/service quality available.



Modulelevel Pneumatic Liquid Level Control

Table of Contents

| | |
|---|----|
| 1.0 Introduction | |
| 1.1 Principle of Operation..... | 1 |
| 1.2 Operating Cycle | 1 |
| 1.3 Description..... | 2 |
| 1.3.1 Controller Action | 2 |
| 1.3.1.1 Proportional Control..... | 2 |
| 1.3.1.2 Transmitter..... | 2 |
| 1.3.1.3 Transmitter/Receiver Controller | 2 |
| 1.3.1.4 Proportional Plus Integral Control..... | 2 |
| 1.3.1.5 Differential Gap | 3 |
| 1.3.2 Controller Options | 3 |
| 1.3.2.1 Direct or Reverse Action..... | 3 |
| 1.3.2.2 Electric Limit Switches | 3 |
| 1.3.3 Mounting Arrangements..... | 3 |
| 1.3.3.1 Flanged Top P51, P61 and P62 Displacer Models..... | 3 |
| 1.3.3.2 Top Mounted APM-131 | 3 |
| 1.3.3.3 External Cage P53, P55, P63, P64, P65, P66, P71, P72, P73 and P74 Displacer Models | 3 |
| 1.3.3.4 External Cage APM-W251, APM-W254 and APM 291 | 4 |
| 1.3.3.5 Side Mounted P68 Float Model | 4 |
| 2.0 Installation | 4 |
| 2.1 Unpacking..... | 4 |
| 2.1.1 P51, P61, P62 and APM-131 Models | 4 |
| 2.1.2 P53, P55, P63, P64, P66, P71, P72, APM-W251, APM-W254 and APM-W291 Models | 4 |
| 2.1.3 P68 Models | 4 |
| 2.1.4 Transmitter – Receiver Controller Units | 5 |
| 2.1.5 Specifications | 5 |
| 2.2 Mounting | 6 |
| 2.2.1 Top Mounted Models – P51, P61, and P62 | 7 |
| 2.2.2 External Cage Models – P53, P55, P63, P64, P65, P66, P71 and P72..... | 7 |
| 2.2.3 Side Mount Models – P68..... | 8 |
| 2.2.4 Transmitter – Receiver Models | 8 |
| 2.3 Calibration | 9 |
| 2.3.1 Proportional Controllers..... | 9 |
| 2.3.1.1 Calibration Chart instructions..... | 11 |
| 2.3.2 Reset Controllers | 12 |
| 2.3.3 Transmitters..... | 13 |
| 2.3.4 Receiver Controllers..... | 14 |
| 2.3.5 Differential Gap..... | 14 |
| 2.3.6 Interface Models | 15 |
| 2.3.7 Electric High/Low Limit Switches | 16 |
| 2.3.7.1 Electrical Ratings..... | 16 |
| 2.3.7.2 Wiring Information..... | 16 |
| 2.3.7.3 Adjustment Procedure | 17 |
| 2.4 Field Modifications and Adjustments | 17 |
| 2.4.1 Changing Controller Action | 17 |
| 2.4.2 Proportional Band Models to Differential Gap..... | 17 |
| 2.4.3 Pneumatic-to-Current (P/I) Converter | 17 |
| 2.4.4 Reset Installation | 18 |
| 2.4.5 Reset Cleaning..... | 19 |
| 2.4.6 Disabling Reset..... | 19 |
| 3.0 Reference Information | |
| 3.1 Troubleshooting..... | 20 |
| 3.1.1 Installation..... | 20 |
| 3.1.2 Calibration | 20 |
| 3.1.3 Operation | 21 |
| 3.2 Specifications..... | 23 |
| 3.2.1 Standard Flanged Top and Flanged Cage Displacer Models P62, P63, P64, P65 and P66 Dimensional Specifications..... | 23 |
| 3.2.2 High Pressure Flanged Top and Flanged Cage Displacer Models P51, P53 and P55 Dimensional Specifications..... | 24 |
| 3.2.3 Standard Sealed Cage Displacer Models P71 and P72 Dimensional Specifications | 25 |

Modulelevel Pneumatic Liquid Level Control

Table of Contents (continued)

| | | | | | |
|-----------|--|----|---------|--|----|
| 3.2.4 | Models APM-131, APM-W251, APM-W254 and APM-W291 Dimensional Specifications | 26 | 3.3.6.6 | Gasket Kit for Relay Assembly 89-8501-014 @ 3–15 and 6–30 psig..... | 41 |
| 3.2.5 | Standard Side Mount Float Models P68 Dimensional Specifications | 27 | 3.3.6.7 | Additional Replacement Parts..... | 41 |
| 3.3 | Replacement Parts | 28 | 3.3.7 | Reset Replacement Parts | 42 |
| 3.3.1 | Model P68 Threaded and Flanged Parts Identification..... | 28 | 3.3.7.1 | Reset Replacement Assemblies..... | 43 |
| 3.3.1.1 | Model P68-2F2A Threaded 3" NPT | 29 | 3.3.7.2 | Replacement Kits (Reset Valve, O-Ring and Offshore) | 43 |
| 3.3.1.2 | Model P68-2H3A, P68-2H4A and P68-2H5A 4" Flanged..... | 29 | 3.3.8 | Receiver Controller Parts | 44 |
| 3.3.2 | Model Series P6x Parts Identification | 30 | 3.3.8.1 | Receiver Controller Replacement Assemblies | 44 |
| 3.3.2.1 | Series P61, P62, P63, P64, P65, P66, P71 and P72 | 32 | 3.3.9 | Transmitter Mounted Receiver Controller Parts | 45 |
| 3.3.3 | Series P51, P53 and P55 Parts Identification | 33 | 3.3.9.1 | Transmitter Mounted Receiver Controller Replacement Assemblies | 45 |
| 3.3.3.1 | Series P51, P53 and P55 | 34 | 3.3.10 | Pneumatic Modulelevel Replacement Head Kits | 46 |
| 3.3.4 | Model APM-131 Parts Identification..... | 35 | 3.4 | Model Numbers | 48 |
| 3.3.4.1 | Model APM-131 Part Number..... | 35 | 3.4.1 | Standard Flanged Top and Flanged Cage Displacer Models..... | 48 |
| 3.3.5 | Models APM-W251, APM-W254 and APM-W291 Parts Identification | 36 | 3.4.2 | High Pressure Flanged Top and Flanged Cage Displacer Models..... | 50 |
| 3.3.5.1 | Models APM-W251, APM-W254 and APM-W291 Parts Numbers..... | 37 | 3.4.3 | Standard Sealed Cage Displacer Models.... | 52 |
| 3.3.5.1.1 | Model APM-W251 Part Number..... | 37 | 3.4.4 | Standard Side Mount Displacer Models.... | 54 |
| 3.3.5.1.2 | Model APM-W254 Part Number..... | 37 | 3.4.5 | APM Pneumatic Control Models | 55 |
| 3.3.5.1.3 | Model APM-W291 Part Number..... | 37 | | | |
| 3.3.6 | Controller Parts | 38 | | | |
| 3.3.6.1 | Controller Replacement Assemblies Parts Identification..... | 39 | | | |
| 3.3.6.2 | Tubing Kit 89-8501-015 @ 3–15 and 6–30 psig..... | 40 | | | |
| 3.3.6.3 | Nozzle Lever Kit 89-8501-002 @ 3–15 and 6–30 psig..... | 40 | | | |
| 3.3.6.4 | Carriage Assembly Kit 89-8501-003 @ 3–15 and 6–30 psig..... | 40 | | | |
| 3.3.6.5 | Feedback Assembly Kit 89-8501-005 @ 3–15 and 6–30 psig..... | 41 | | | |

1.0 Introduction

Modulelevel pneumatic controls are displacement actuated level sensors that provide output signals in direct proportion to changes in liquid level.

Simple modular design and proven magnetic coupling make Modulelevel controls versatile, highly stable, vibration resistant and adaptable to extremes of temperature and pressure.

1.1 Principle of Operation

The key elements of the Modulelevel pneumatic control are the magnetic coupling, which allows the controller to be mechanically isolated from the sealed sensing unit; the range spring, which converts the change in buoyancy force on the displacer into motion; and the controller head, which provides a modulated pneumatic signal in direct proportion to the motion of the spring.

1.2 Operating Cycle

The result of liquid level changes in the vessel is a change in the buoyancy force acting on the displacer and in the load on the spring from which the displacer is suspended. As the spring extends or compresses with the change in load, an attraction ball attached to the spring via a stem assembly moves within the enclosing tube.

A magnet encircling the enclosing tube follows the attraction ball, transferring the motion to a rotating cam, which in turn operates a flapper against a nozzle which increases or decreases the pressure within the pneumatic relay. The output pressure signal can be used in a variety of ways to operate a control valve or signal alarms, indicators, process controls or other devices.

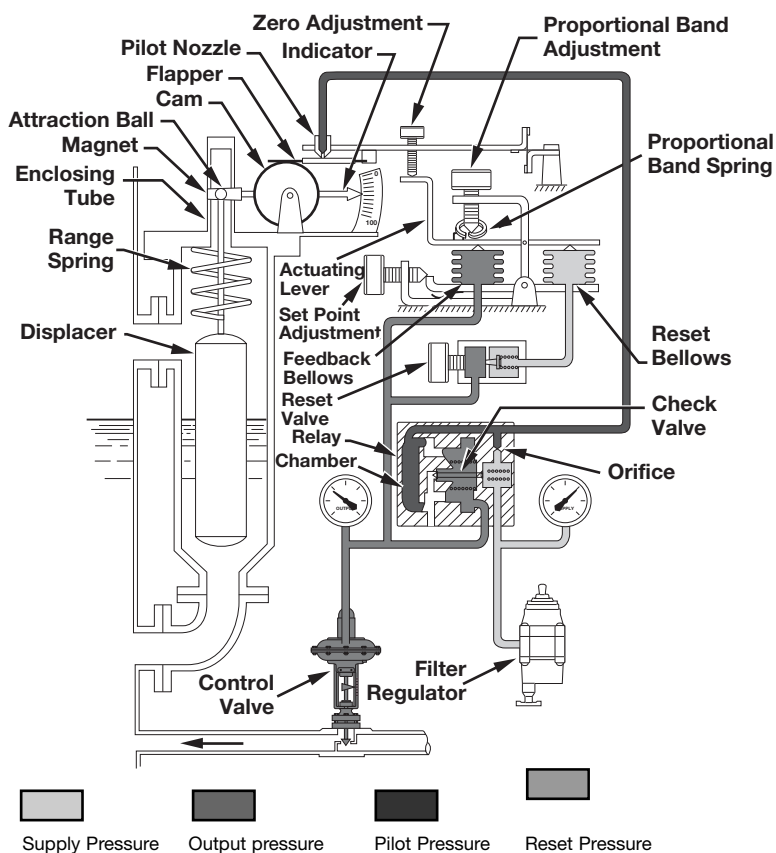


Figure 1

1.3 Description

Module-level pneumatic instruments are available for a variety of functions to handle different application requirements.

1.3.1 Controller Action

1.3.1.1 Proportional Control

Proportional control instruments are used to maintain the level in a tank within a predetermined band. The output from the Module-level head controls the opening and closing of a valve to control the increase or decrease of the liquid flow through the vessel.

1.3.1.2 Transmitter

Transmitters provide a pneumatic signal proportional to the level of a liquid. The signal can be fed to a variety of devices as the application requires.

1.3.1.3 Transmitter/Receiver Controller

There are two devices in this version. The transmitter senses level directly at the vessel, and provides a pneumatic signal to the receiver/controller. The receiver/controller operates in the same manner as a direct connected level device, such as a proportional controller, which allows varying the proportional band and level set point. This unit may be mounted either integrally with the transmitter, or at a more convenient remote location.

1.3.1.4 Proportional Plus Integral Control

Proportional plus integral control instruments (i.e., with reset) operate in the same manner as the proportional unit with one major difference. The offset between the desired level and the actual level is eliminated, thus maintaining the level at a point rather than within a band.

1.3.1.5 Differential Gap

A differential gap instrument provides two distinct outputs, either opened or closed. One distinct output value is obtained when the level exceeds the upper switching point. This value remains constant until the level decreases below the lower switching point. At this time the controller changes to another distinct output value. The new value remains constant until the level again rises above the upper switching point causing the output value to return to the first output value. The distance between the two switching points is called the differential gap.

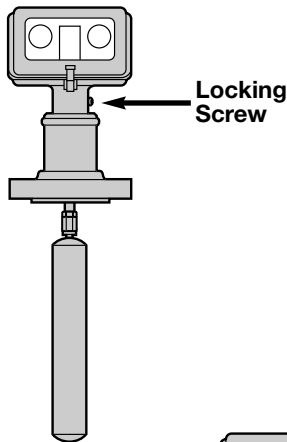


Figure 2
Top Mount

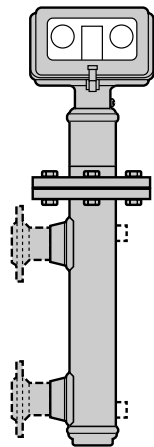


Figure 3
P6X External
Cage

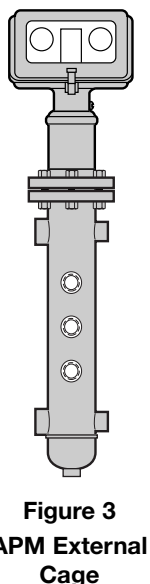


Figure 3
APM External
Cage

1.3.2 Controller Options

1.3.2.1 Direct or Reverse Action

Direct acting controllers provide an output signal that increases with level increase. Reverse acting controllers provide an output signal that decreases with level increase.

1.3.2.2 Electric Limit Switches

Electric limit switches allow high and low level alarms to be added to any of the pneumatic instruments described above.

1.3.3 Mounting Arrangements

1.3.3.1 Flanged Top P51, P61 and P62 Displacer Models

When mounting inside the tank is possible, flanged top models are the answer (figure 2). They are used extensively in interface control applications where nonstandard displacers become necessary. An adjustable stainless steel displacer hanger cable is also available. Top mounting models are directly interchangeable with the external cage models.

1.3.3.2 Top Mounted APM-131

When mounting inside the tank is possible, threaded top models are the answer. An adjustable stainless steel displacer suspension cable is provided as standard.

1.3.3.3 External Cage P53, P55, P63, P64, P65, P66, P71 and P72 Displacer Models

External cage models (Figure 3) can be easily isolated from the process to simplify maintenance and inspection operations. The in-line design eliminates the need for specifying "right hand" or "left hand". Any mounting position is possible by rotating the instrument head. A variety of models are available including sealed or flanged cage with either side/side or side/bottom connections. Carbon steel and stainless steel models are available.

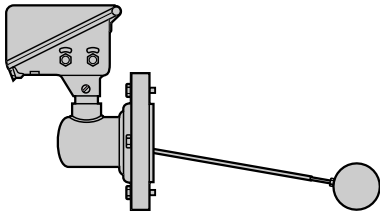


Figure 5

1.3.3.4 External Cage APM-W251, APM-W254, APM-W291

Water Column external cage models (Figure 4) can be easily isolated from the process to simplify maintenance and inspection operations. Sight glass and Try-cock tappings are provided.

1.3.3.5 Side Mounted P68 Float Model

Side mounted models (Figure 5) are ideally suited for narrow level range applications. Carbon steel models are available with either a 3" NPT threaded body or a 4" flanged connection.

2.0 Installation

2.1 Unpacking

After unpacking, inspect all the components to see that no damage has occurred during shipment. Care should be taken not to bend the displacer stem or enclosing tube during unpacking or installation.

Next, open controller case and remove magnet hold down and nozzle lever retainers. Examine internal controller components for any obvious damage or loosened parts. Check all air connections to make certain they are free of any foreign matter.

2.1.1 P51, P61, P62 and APM 131 Models

Top mounting Modulelevel units are shipped from the factory with the controller and displacer removed from the head assembly and packed separately in the same carton or crate.

2.1.2 P53, P55, P63, P64, P66, P71, P72, APM-W251, APM-W254 and APM-W291 Models

All cage type Modulelevel units are shipped with the controller removed from the chamber assembly and packed separately in the same carton or crate.

A strap and wire assembly retains and protects the displacer within the chamber during shipment. The assembly must be removed through the bottom connection before start-up.

Caution: If reshipping to another location, displacer assembly must again be secured using same strap and wire assembly.

2.1.3 P68 Models

The side mounting Modulelevel units are shipped with the controller and float and stem assembly removed from the body and are packed separately in the same carton or crate.

After unpacking, inspect all components to see that no damage has occurred during shipment.

2.1.4 Transmitter — Receiver Controller Units

Dual head receiver controller models may be supplied to be integrally mounted to the top mounting or external cage style Modulelevel controls or to be remotely mounted away from the Modulelevel controls. Units supplied with top mounting Modulelevels may be shipped assembled and connected to the transmitter head or separately for field assembly. External chambered units will have the receiver controller head connected to the transmitter head, but separate from the chamber. Any heads shipped unassembled from the Modulelevel will be packed in the same carton or crate as the control. Handle controllers carefully to avoid damage to the airline piping.

2.1.5 Specifications

| Description | | Specification |
|--|----------------------------|--|
| Process pressure | | Up to 4265 psig at 100° F (Up to 318 bar at 38° C) |
| Process temperature | | -150° F to +700° F (-101° C to +371° C) Stainless steel chamber and bolting required for temperatures below -20° F. (Consult factory). |
| Specific gravity range | | Minimum: 0.23 Maximum: 2.20 |
| Interface detection | | Minimum difference of 0.10 specific gravity between liquids |
| Process connections | | NPT, Socket Weld or Flanged |
| Supply pressure | | Instrument quality air (clean and dry) Regulated to 5 psig (.3 bar) above maximum output. |
| Output signal pressure | Proportional & transmitter | 3–15 psig, 6–30 psig |
| | Differential gap | 0–20 psig or 0–35 psig |
| Visual Indicator | | % Span |
| Level range & proportional band adjustment | | Limited only to displacer length. From inches to 10 feet (3 meters). |
| Air consumption | | 3 SCFH at 9 psig output 6 SCFH at 15 psig output |
| Response speed | | 100 cu. in. output volume in 3.2 sec. upon an output pressure increase from 3–15 psig. |
| Wetted parts | | Trim: 304 or 316 SS Spring: 316 SS or inconel Chamber: Carbon steel or 316 SS |
| Control action | | Direct or reverse |
| Modes of operation | | Proportional control, Differential gap, Transmitter |
| Housing (standard) | | NEMA 1, 2, 3, and 3R |
| Limit switch ratings | | Max. voltage: 120 VAC/VDC Max. resistive load: 10 VAC/VDC Max. current: ¼" amp switching 1 amp holding |

2.2 Mounting

Before assembling control to vessel, check with spirit level to ensure that the mounting flange is horizontal. Proper operation of the control depends on the Modulelevel controller being within 3° of vertical in all directions. The head assembly with sensing components is installed first, then the controller is placed carefully over the enclosing tube, rotated to desired position, and then locked in place by securely tightening the locking screw. Check to be certain the controller magnet can move smoothly throughout its actuating stroke without binding against the enclosing tube. If binding occurs, loosen the slot-head screw, reposition magnet and tighten screw.

Caution: The spring and stem assembly that protrudes below the mounting flange on a top mounted Modulelevel is very fragile. DO NOT handle this assembly or place control so that any amount of force is exerted on the spring and stem assembly. Proper operation of the control requires that this assembly is not damaged or bent.

Caution: Displacer spring and stem are fragile. Do not drop displacers into tank. Hand feed cable into position to avoid bending stem.

Caution: All Modulelevel units are shipped from the factory with the enclosing tube tightened and the controller head set screw locked to the enclosing tube (see figure 2, page 3). Failure to loosen the set screw prior to repositioning the supply and output connections may cause the enclosing tube to loosen, resulting in the possible leakage of the process liquid or vapor.

NOTE: Since controller is rotatable through 360°, it is important to make certain controller locking screw is tight before installing air or gas connections.

The supply and output air or gas connections provided on the Modulelevel are $\frac{1}{4}$ " NPT. These connections are clearly indicated on the side of the controller. The filter-regulator (if furnished) is to be set to deliver a 20 psig supply pressure to a 3–15 psig output controller or a 35 psig supply pressure to a 6–30 psig output controller. The main supply pressure to the regulator should be between 25 and 250 psig (or 40 and 250 psig) and connected to the inlet side of the regulator. In order to protect the instrument from contaminants, clean, dry air or gas must be used as a supply medium.

Caution: Do not overtighten fittings in supply and output connections. Overtightening may crack the housing outlets.

Caution: Operation of all buoyancy type level devices should be done in such a way as to minimize the action of dynamic forces on the float or displacer sensing element. Good practice for reducing the likelihood of damage to the control is to equalize pressure across the device very slowly.

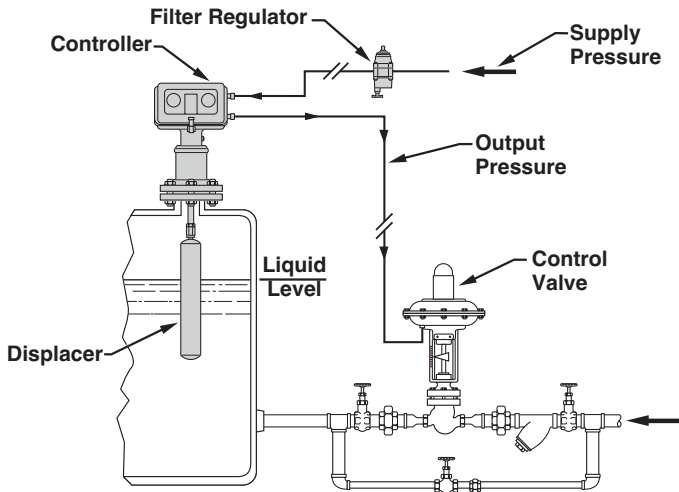


Figure 6
Top Mounted Units

2.2.1 Top Mounted Models – APM-131, P51, P61, and P62

Check to be certain there are no tubes, or other obstacles in the vessel to interfere with the operation of the displacer. Stillwells are recommended where a continuous agitation or motion is prevalent.

NOTE: Stillwell installation should be checked to be certain tube (or pipe) is plumb. An out-of-plumb still well may restrict displacer movement. Also, ensure that the stillwell is vented at the top to allow the liquid to rise in the tube with level movement.

Figure 6 shows a typical piping installation for a top mounted unit to a tank or vessel.

2.2.2 External Cage Models – APM-W251, APM-W254, APM-W291, P53, P55, P63, P64, P65, P66, P71 and P72

The external cage type Modulelevel should be mounted on the side of the tank or vessel with either side/side connections or side/bottom connections, as shown in Figure 7. Mid-range mark on control cage should be aligned to correspond with desired control level in tank or vessel.

NOTE: It is essential that the external cage assembly be mounted plumb to ensure frictionless operation of its internal displacer.

It is recommended that isolation valves be installed in each equalizing line to the cage as well as a drain valve at the bottom of the chamber (refer to Figure 7). Equalizing lines should be sized at least as large as connections provided on the cage.

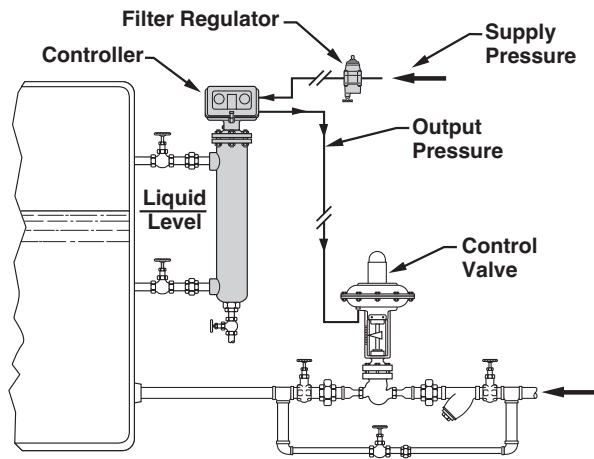


Figure 7
External Cage Units

2.2.3 Side Mount Models – P68

Side mount controls mount horizontally to any tank or vessel through a flanged or threaded pipe connection. Refer to the illustrations on page 27 for threaded nozzle and flanged mounting dimensions. It is essential that the control be mounted horizontal.

NOTE: To allow the 3" float to pass through the nozzle, the nozzle bore diameter must not be less than 3.00" schedule 40 pipe size.

2.2.4 Transmitter – Receiver Models

Check installation considerations described for either top mount or cage type mounting units and apply those appropriate for joint installations with receiver controllers.

Figure 8 shows a typical piping installation of a receiver controller to a top mounted transmitter type Modulevel control. A chamber type Modulevel installation would be the same, with obvious physical differences on a side of tank installation. Piping for a separate receiver controller would be done in a similar manner except unit would be remotely wall or panel mounted in a control house or installed at or near the control valve.

NOTE: Refer to page 41 for detailed assembly of receiver controller to a transmitter type Modulevel controller.

Check alignment of mounting bracket for receiver controller to be certain top surface of collar is flush with top head assembly so that tops of both controller heads are in the same plane.

NOTE: Alignment of controllers is required only to suit factory furnished piping and fittings between controllers. If mounting is to be accomplished using any other method, including remote installations, all piping must be provided by customer.

All pneumatic (piping) connections should have threaded joints, sealed with Teflon thread tape or pipe compound suitable for use on pneumatic lines; $\frac{1}{4}$ inch pipe size or $\frac{5}{16}$ inch O.D. tubing is recommended.

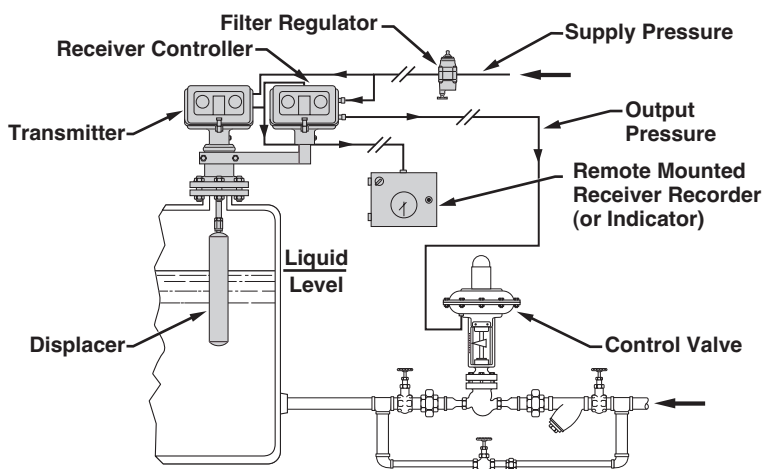


Figure 8
Transmitter – Receiver Controller Units

2.3 Calibration

2.3.1 Proportional Controllers

Each Modulelevel control is calibrated at the factory before shipment. Specified actions have been preset and all scales have been calibrated. However, upon receipt of the instrument the following calibration and adjustment procedure is recommended for all controllers:

1. Check supply pressure:

After appropriate piping has been made to the filter regulator and output connections, and checked for leaks, the supply gauge, shown in Figure 9, should indicate 20 psig (35 psig for 6–30 psig controllers).

2. Check control action:

To check controller action, manually rotate the magnet carriage to simulate an increase in level. Note the direction of the output pressure change. (Rising level will increase the output pressure on direct acting controllers.

Conversely, rising level will decrease the output pressure on the reverse acting controllers.) The action cam and level adjustment knob must both indicate the same action

Should it be required to change the controller action, the action cam can be manually rotated 180° to the desired action. Make certain that the notch in the cam is set into the tab of the pilot nozzle assembly. Cam actions are clearly marked on the cam face as indicated in Figure 10. A zero adjustment will normally be required upon change.

NOTE: It is also important that the level adjustment knob scale action be compatible with the cam action. The level adjustment knob scale is printed **DIRECT ACTION** on one side and **REVERSE ACTION** on the other. To change scales, remove level adjustment knob and turn over level scale. Replace knob with same orientation on shaft as before removal.

3. Check level indicator zero setting.

A level indicator is furnished with each Modulelevel pneumatic controller and is conveniently located inside the instrument case. The level indicator, shown in Figure 11, indicates the level as a percentage of the displacer length.

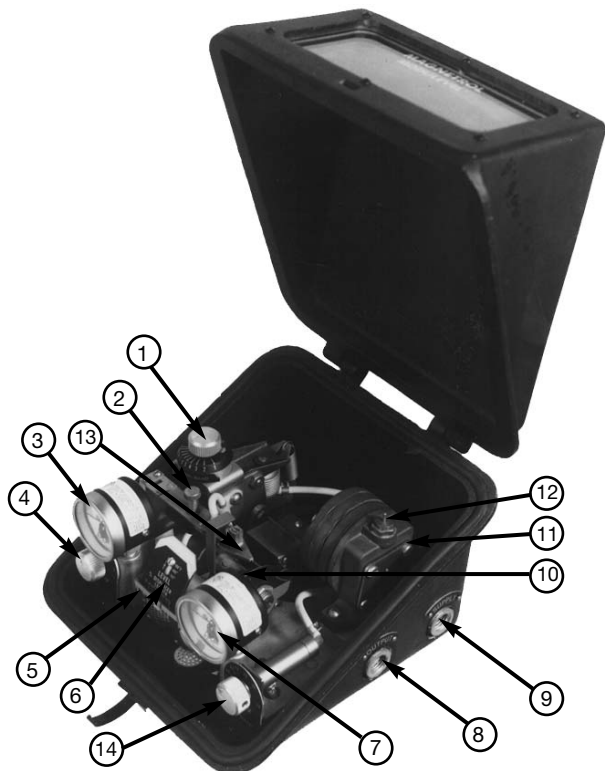


Figure 9
Proportional Controller with Reset

- | | |
|-------------------------------------|----------------------------|
| ① Proportional band adjustment knob | ⑧ Output connection |
| ② Zero adjustment screw | ⑨ Supply connection |
| ③ Supply pressure gauge | ⑩ Action cam |
| ④ Level adjustment knob | ⑪ Relay |
| ⑤ Magnet carriage | ⑫ Orifice cleanout plunger |
| ⑥ Level indicator | ⑬ Flapper nozzle assembly |
| ⑦ Output pressure gauge | ⑭ Reset adjustment knob |

Proportional Control

Differential Gap Control

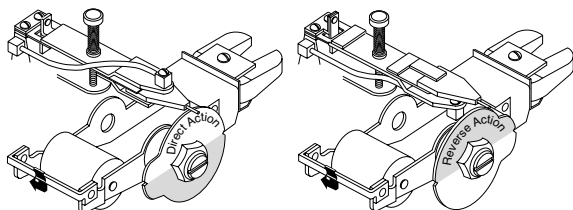


Figure 10
Pilot Nozzle Assembly

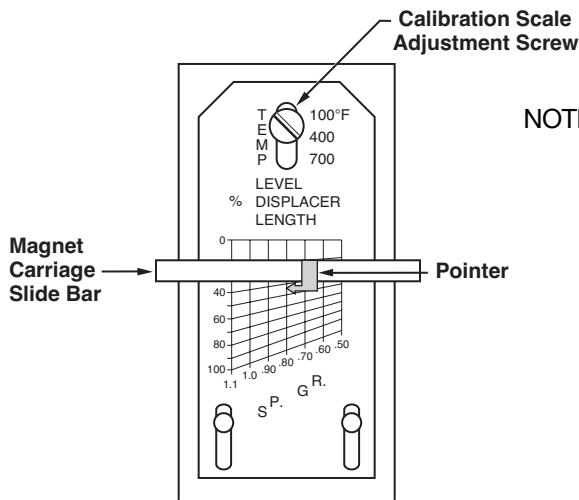


Figure 11
Level Indicator

Figure 11 shows a liquid specific gravity of .8 with a corresponding level reading of 45% and a process temperature of approximately +250° F (+121° C). An adjustment is provided on the level indicator to calibrate the pointer and indicator scale when control is at operating temperature.

NOTE: Consult factory for procedure to calibrate level indicator if precise reading is required.

With the system at operating temperature, adjust level of process liquid in the tank (or vessel) to allow the displacer to "hang-free" above the liquid. The pointer on the level indicator should read zero percent on the indicator scale. Refer to Figure 11. To adjust, loosen calibration adjustment screw at the top of the indicator scale and move scale until the pointer is aligned to zero. Retighten adjustment screw.

4. Adjust the proportional band and the level:

(The proportional band is the span setting.) The proportional band adjustment knob, located adjacent to the pilot nozzle assembly, sizes the proportional band as a percentage of the displacer length. When the proportional band is set at 5, the output range will correspond to 50% of the total displacer length. For example; on a control with a 14" displacer, a proportional setting of 5 will result in full output range over a 7" level change.

(The level adjustment is the control set point.) The level adjustment knob, located just below the supply pressure gauge, positions the midpoint of the proportional band on the displacer. For example; on a control with a 14" displacer, a level setting of 5 will locate the midpoint of the proportional band 7" from the bottom of the displacer.

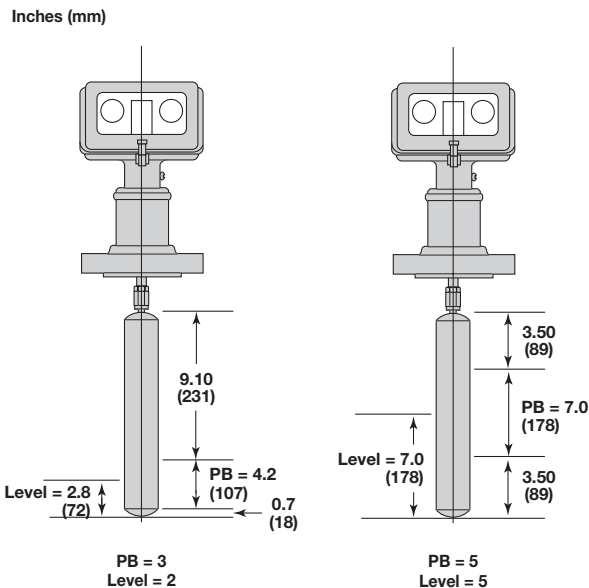



Figure 12
Proportional Band & Level

The proper method for calibrating a proportional controller follows:

Calibration example: 1.00 specific gravity liquid, 50% proportional band desired, 50% level adjustment desired, 3–15 psig output, direct action.

- 4.1 Set the pointer on magnet carriage slide bar to 1.00 specific gravity.
- 4.2 Set both the level and proportional band knobs to 5 (or 50%) on each scale.
- 4.3 Move the magnet carriage by hand until the pointer reads 50% of displacer length, hold accurately at this position.
- 4.4 Adjust the zero screw until the output pressure gauge reads 9 psig.
- 4.5 Move the magnet carriage pointer to 75% displacer length. Output pressure should read 15 psig.

NOTE: If required, small readjustments can be made at the level and proportional band knobs.

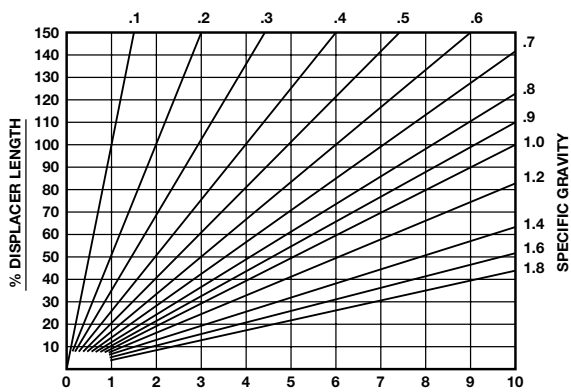

DIAL SETTING FOR LEVEL & PROPORTIONAL BAND

Figure 13

Dual Setting for Level & Proportional Band

5. Set the level and proportional band for your application. Use calibration chart and instructions given in Figure 13 to select the level and proportional band dial settings based on the specific gravity of liquid to be measured.
 - 5.1 Set the magnet carriage slide bar to the correct liquid specific gravity for your application.
 - 5.2 To check the zero adjustment, bring the liquid level up until the level indicator reads the desired level set point. Set the zero adjustment screw until output pressure gauge reads 9 psig.
6. To check the level and 3–15 settings:

Adjust the liquid level until the level indicator reads the low value of the desired span range in terms of % of displacer length. The output pressure should read 3 psig. Adjust the liquid level to the maximum value of the desired span range in terms of % of displacer length. The output pressure should read 15 psig.

2.3.1.1 Calibration Chart instructions

To set level:

1. Determine the desired level set point in terms of % of displacer length.
2. Trace desired level from left to right to the specific gravity line for the product.
3. Trace down from where the two lines intersect to the appropriate dial setting.
4. Adjust the level setting on the controller to this value.

To set proportional band:

1. Determine the desired proportional band in terms of % of displacer length.
2. Trace from left to right to the specific gravity line for the product.
3. Trace down from where the two lines intersect to the appropriate dial setting.
4. Adjust the proportional band setting on the controller to this value.

NOTE: If required, small readjustments can be made at the level and proportional band knobs. To increase proportional band, the band knob is turned to a higher number. For best control, it is normally desirable to set the proportional band at the narrowest setting which will not produce cycling. To raise the level, the level adjustment knob is rotated in the desired direction indicated on the dial face.

2.3.2 Reset Controllers

Each Modulelevel control is factory calibrated before shipment for 30% span and minimum reset. The following calibration and adjustment procedures are recommended for all reset controllers:

1. Check to make sure the reset knob is fully counterclockwise.

NOTE: This effectively reduces the reset time to a minimum, but does not completely eliminate reset.

2. Follow the calibration steps 1 through 4 for proportional controllers beginning on page 9.
3. Use the calibration chart, Figure 13, to select the level and proportional band initial settings, based on the specific gravity of the liquid to be measured.
4. Adjust the reset clockwise until stable control is maintained.
5. Set the magnet carriage slide bar to the correct liquid specific gravity for your application.

The following adjustment procedure can be used to calibrate the reset controller to your specific application by adjusting the liquid levels:

Alternate method to calibrate reset

1. Set the proportional band index to 10. (This setting is comparable to 100% for S.G. equal to 1.0.)
2. Turn the reset dial fully counterclockwise.
3. Slowly open downstream and upstream manual control valves and close by-pass valve.
4. Adjust control point to desired level by means of level adjustment knob.
5. Narrow the proportional band until a cyclic control condition occurs. Then, widen the proportional band by approximately 20% to give stable control.
6. Decrease the reset time until a cyclic condition again occurs. Then, increase the reset time until stable control is maintained.
7. Normally the narrowest proportional band and fastest reset timing required to obtain stability will produce the optimum control. It is recommended that a momentary load upset is then produced to further check system stability and response. (Load can be imposed by moving magnet carriage manually.)

NOTE: Allow system enough time to stabilize after each adjustment.

2.3.3 Transmitters

For Modulelevel transmitters, the output signal is directly proportional to the level on the displacer. To calibrate a Modulelevel transmitter:

1. Follow steps 1 through 3 for Proportional Controllers (page 9).
2. Set the zero adjustment knob to a vertical position (arrow straight up at 12 o'clock).

NOTE: Don't confuse the zero adjustment knob with the zero screw located on top of the pilot nozzle assembly.

3. Set the pointer on the magnet carriage slide bar to the process specific gravity.
4. Set the specific gravity knob to the process specific gravity.

NOTE: The specific gravity adjustment sets the span for the unit.

5. Rotate the magnet carriage on the visual level indicator by hand, until the pointer reads 50% of displacer length.
6. While holding the magnet carriage at 50%, adjust the zero screw to obtain 9 psig output pressure for 3–15 psig units (or 18 psig output for 6–30 units).
7. Rotate the magnet carriage by hand to 0% displacer length. The output should be 3 psig. If it is not, slightly adjust the specific gravity knob to obtain 3 psig output pressure.
8. Rotate the magnet carriage by hand to 100% displacer length. The output pressure should be 15 psig. If it is not, slightly adjust the specific gravity knob to obtain 15 psig output pressure.
9. Recheck the midpoint (50% displacer). Adjust the zero screw to obtain 9 psig output pressure if it has changed.
10. Recheck the zero output and full scale output.

The Modulelevel transmitter has now been calibrated using the level indicator to simulate process level. If a more precise calibration to the actual process conditions is required, the above procedure can be performed using actual process level on the displacer to set the calibration points.

2.3.4 Receiver Controllers

1. Connect the output from the transmitter to the receiver controller input at the rear of the receiver controller housing.
2. Connect a separate supply and output at the right side of the receiver controller housing.
3. Set the proportional band knob at 100 (100%).
4. Set the direct acting knob at 5 (50%). The output gauge should read the same as the transmitter output. If it does not, adjust the zero knob on the receiver controller until both readings are the same.

To increase or decrease span distance, turn the proportional band knob to the setting desired, for example, 50 = 50% of span. To move the span mid-point, turn the direct action knob to the setting desired.

For a reverse acting output, from a direct acting transmitter output, invert the spring/bellows assembly so that the bellows are on top. Recalibrate as described above.

Remove the direct acting indicator plate, and turn it to reverse acting. Recalibrate as described above.

If reset is included with the receiver controller, turn the reset knob fully counterclockwise and calibrate as described above.

Adjust reset clockwise until stable control is maintained.

2.3.5 Differential Gap

1. Follow steps 1 through 4 of Proportional Controller Calibration section. Refer to pages 9 through 13, except the output is 0–20 psig or 0–35 psig with no mid-range adjustment.

NOTE: When checking the control action for a direct action differential gap unit, set the cam to reverse action; for a reverse action differential gap unit, set cam to direct action.

2. Check that the pilot nozzle assembly is set up for differential gap operation. Figure 10 on page 9 illustrates the pilot nozzle flapper configurations used for the two control modes, proportional and differential gap. If your unit is already set up for differential gap mode, proceed to step 3.

To change the control mode:

- a. Loosen the tube clamp screw.
- b. Remove the zero screw from the pilot nozzle assembly.
- c. Remove both screws and top plate from the pilot nozzle assembly.
- d. Flip the pilot nozzle assembly 180° and install screws with top plate in position.
- e. Install the zero screw in the pilot nozzle assembly.
- f. Rotate the tube clamp to horizontal and tighten the tube clamp screw. The cam follower should now rest on the action cam. If it does not, readjust bracket without crimping the tube.

NOTE: Make sure the tube is not kinked and does not interfere with the carriage and the nozzle lever.

- g. Change the controller action. For direct action, set the cam to reverse acting; for reverse action, set the cam to direct acting.
3. Check zero output. Set level adjustment knob to 5 or vertical position. Set proportional band knob to 3. Place level indicator at 35% position (65% position for reverse action units). Adjust zero screw to get supply pressure value output; then, slowly readjust the zero screw until output suddenly decreases to zero.
4. Check 20 psig or 35 psig output. Slowly move the attraction sleeve to 65% (35% for reverse action units), at which point the output should suddenly rise to supply pressure. If not, adjust the proportional band knob until it does.
5. Set the level and proportional band for your application.

2.3.6 Interface Models

For an interface application, the Modulevel has been factory precalibrated to operate in liquids with specific gravities supplied by the customer. The displacer is weighted to obtain a zero (3 psig or 6 psig signal) with the displacer fully submerged in the lighter liquid only [15 psig or 30 psig with displacer covered with the heavier fluid]. The indicator arrow should be set to the difference between the two specific gravities of the liquids.

Follow the procedures given for installation and calibration of proportional controllers. Refer to pages 9 through 13. Keep in mind that the "hang-free" or zero setting is obtained with the displacer fully submerged in the lighter liquid, and completely uncovered by the interface (heavier liquid).

As is indicated in the Calibration section for proportional controllers, the signal should be at 9 psig or 18 psig output with the interface level at the control set point (level knob setting) on the displacer. Because of the reduced displacer motion for interface applications, the proportional band should be set as wide as possible, with a minimum of 50%.

2.3.7 Electric High/Low Limit Switches

The Pneumatic Modulelevel is available with optional built-in, adjustable electric high/low level limit switching. This economical, optional feature is well-suited to numerous applications where a combination pneumatic control and electric switch actuation is desired.

The Pneumatic Modulelevel is used to pneumatically position a diaphragm-type feedwater control valve in response to water level changes in the steam drum. The convenient addition of electric limit switching provides economical high and low level alarm indication. These switches are not intended for primary control purposes.

NOTE: Not suitable for Class I, Div. 1 applications.

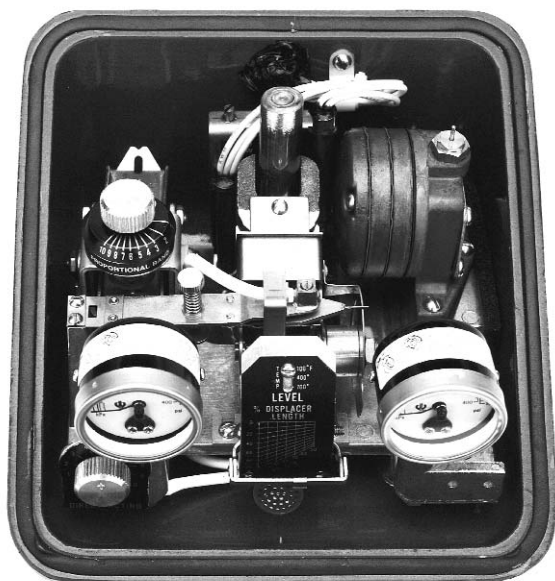


Figure 14

2.3.7.1 Electrical Ratings

Each reed switch carries the following electrical ratings:

| | |
|------------------------------|---|
| Maximum voltage | 120 VAC or 120 VDC |
| Maximum resistive load | 10 VAC or VDC |
| Maximum current | $\frac{1}{4}$ ampere switching, 1 ampere holding |

NOTE: For lamp or capacitive applications, the reed switches are rated six (6) watts maximum.

2.3.7.2 Wiring Information

Each reed switch assembly is wired at the factory and furnished with number-coded, 24.00 inch long silicone rubber insulated copper lead wires. Each reed switch is SPDT in operation. Standard wiring follows:

High level reed switch

- No. 5 lead is common
- No. 6 lead energizes at high level
- No. 4 lead de-energizes at high level

Low level reed switch

- No. 2 lead is common
- No. 3 lead energizes at low level
- No. 1 lead de-energizes at low level

NOTE: Use extreme care in handling the reed switches during wiring and adjustment procedures.

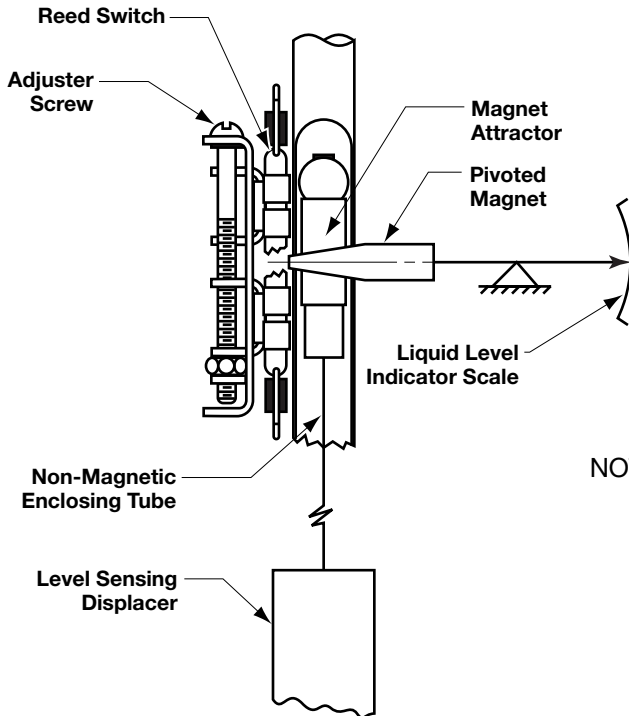


Figure 15

2.3.7.3 Adjustment Procedure

Prior to adjusting the reed switches, the Pneumatic Modulelevel should be calibrated to obtain the desired pneumatic proportional band and level position adjustment.

After wiring the reed switches to the device to be operated, they may be adjusted manually to actuate at the desired high and low liquid level positions. Move the liquid indicator by hand to the desired low level actuating point on the indicator scale.

NOTE: Scale readings are expressed in percent of displacer length.

Hold the indicator at the desired low level actuating point. Turn the left hand adjuster screw until the reed switch actuates.

The high level reed switch is adjusted in the same manner by moving the level indicator to the desired high level actuating point, and by turning the right hand adjuster screw until the high level reed switch actuates.

2.4 Field Modifications and Adjustments

2.4.1 Changing Controller Action

The controller can be changed from direct acting to reverse acting or vice versa. Should it be required to change the controller action, refer to step 2 in the Proportional Controllers section of Calibration. Refer to page 9.

2.4.2 Proportional Band Models to Differential Gap

A proportional band controller can be changed to operate in the differential gap mode. For the appropriate procedures, see the Differential Gap section on page 14.

2.4.3 Pneumatic-to-Current (P/I) Converter

Modulelevel units are available with a P/I transducer to provide an electronic output signal proportional to liquid level change. Refer to the manufacturer's instructions supplied with the transducer.

2.4.4 Reset Installation

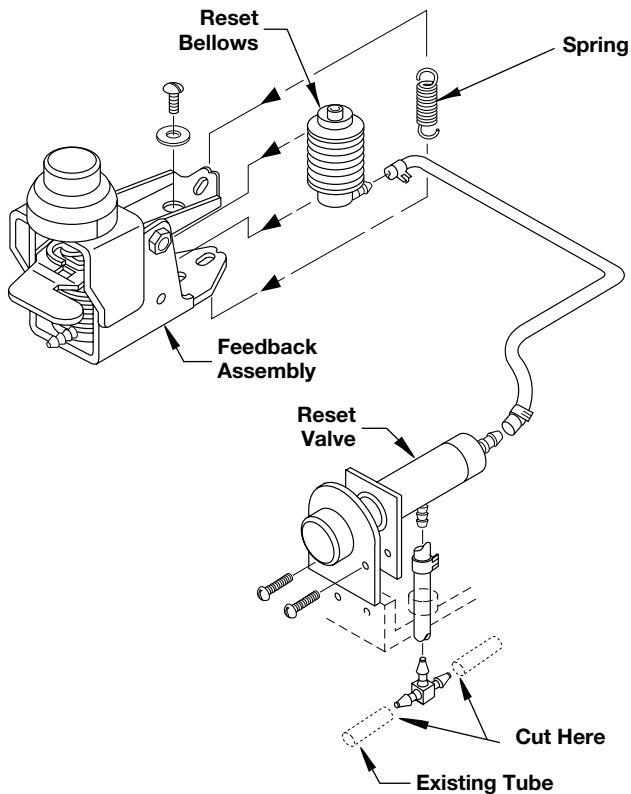


Figure 16
Reset Assembly

Reset, when added to a proportional controller, acts to maintain the controlled liquid level at the desired control point while eliminating any sustained offset from this point.

The reset adjustment is accomplished by manually adjusting a precision needle valve. The reset dial is calibrated from .03 to 1.0 minutes per repeat, with short intervals at the low end of the scale to give precise settings. The reset timing refers to the time in minutes required for the reset to produce an additional output pressure change equal to the previous change caused by proportional action.

The reset module assembly may be added to any Modulelevel Proportional Controller in the field.

The following procedure is recommended for adding reset to a proportional controller in the field.

1. The knob on the reset assembly should point to the 12 o'clock position. Tear foam rubber from between the two plates on the reset assembly. Make sure knob remains at the 12 o'clock position.

NOTE: Do not move the front plate or knob on the reset valve or the reset assembly will not work.

2. Remove both screws from the reset valve assembly.
3. Drop the reset valve into position on the frame.
4. Install and tighten the two screws.
5. Add one clamp to each end of both tubes.
6. Slide the long piece of tube onto the barb at rear of reset valve. Slide the clamp into position.
7. Slide the middle prong of the barbed tee onto short piece of tube. Slide the clamp into position.
8. Slide the short piece of tube opposite the barbed tee onto the vertical barb on bottom of reset valve. Slide the clamp into position.
9. Cut the tube adjacent to the barbed tee below the reset valve assembly. Refer to Figure 16.
10. Slide the clamps over the cut ends of the tube.
11. Slide the cut tubes onto the barbed tee.
12. Insert the reset bellows in the feedback assembly so that the bellows end bushings are piloted in the bracket locating holes.
13. Rotate the reset nipple to the 2 o'clock position as you look down at the reset bellows.

-
14. Route the long piece of tube from the reset valve, under the relay assembly, behind the enclosing tube and to the reset bellows.
 15. Slide the long piece of tube onto the reset bellows. Slide the clamp into position.
 16. Add the washer and screw through the lever assembly and into the reset bellows. Tighten the screw.
 17. Add the reset bias spring to the tail end of the lever assembly.
 18. Refer to the reset calibration procedure on page 12.

2.4.5 Reset Cleaning

Should it be required to clean the reset orifice, refer to the reset replacement parts drawing on page 43 and proceed as follows:

1. Disconnect the reset line adaptor fitting from the valve body and remove the reset valve mounting screws.
2. Remove the reset valve and disassemble bushing along with all related parts.

NOTE: Shaft and bracket assembly must not be disassembled.

3. Clean orifice and plunger set by dipping in carbon tetrachloride or any suitable solvent being careful not to mar any finished surfaces.

2.4.6 Disabling Reset

In the case that the proportional controller is supplied with reset that is no longer required, the reset can be disabled to modify the controller head to proportional only.

To disable this action:

1. Turn the reset knob fully counter-clockwise
2. Disconnect hose (attached to rear of reset assembly) by removing the compression fitting and pulling the hose from the nozzle.
3. Trace the hose to the bellows assembly and remove the bias spring completely from this assembly. Leave this end of the hose attached to the bellows nozzle.

Unit will now be configured as a direct acting proportional and is ready for calibration.

3.0 Reference Information

3.1 Troubleshooting

3.1.1 Installation

The magnet carriage assembly binds at either the magnet or the indicator scale.

1. The magnet binds on the enclosing tube. Loosen the retaining screw on magnet bracket and adjust the magnet alignment.
2. The carriage binds on the indicator scale. Check for damaged, bent, or loose parts.
3. Check for proper mounting of the controller head.

3.1.2 Calibration

Signal pressure does not change with simulated level change or unit won't calibrate properly.

1. Make certain the output gauge is operational.
2. Make certain the supply gauge reads 20 psig for 3–15 models or 35 psig for 6–30 models.
3. Check for proper calibration settings, refer to appropriate calibration instructions on pages 9 through 14.
4. Check the proportional band and level settings for proper process specific gravity. Refer to the calibration chart, figure 13 on page 11, in the Calibration section, for settings corresponding to process specific gravities other than 1.0.
5. The level indicator should be set for the proper process temperature.

Cannot obtain proper midspan output (9 psig for 3–15 models or 18 psig for 6–30 models).

1. Adjust the zero adjustment screw.
2. Check if reset is included, the output signal will not be steady.

Constant high output (pressure does not drop after manually moving the carriage so that the flapper drops away from the nozzle).

1. Clogged exhaust nozzle from contamination or poor quality air supply. Clean nozzle by removing the small screw on the top of the nozzle and blow out any foreign material, or run fine monofilament type line through the opening.

-
2. Damaged or bent flapper spring. The flapper should stroke approximately $\frac{1}{16}$ inch away from the nozzle in the free hanging position. If it does not, carefully bend the spring down with a screwdriver forcing the flapper away from the nozzle.
 3. Obstructed output. Check connection at signal output.

Constant low output, cannot obtain full scale signal.

1. Check for a clogged relay/wiper by depressing the orifice clean out plunger. If this does not solve the problem, the relay may be internally damaged. Consult the factory.
2. Check for proper supply pressure, described above.
3. Check for leaks at all field connections and tubing.
4. Check calibration settings.

3.1.3 Operation

Control valve continually oscillates or hunts.

1. Proportional band setting is too narrow. To ensure that the optimum proportional band setting has been made, create a momentary load upset by manually moving the magnet carriage and allowing the controller to again come into balance. If a cyclic condition recurs, widen the band slightly and repeat the above procedure until stability is maintained.
2. Distance between the control valve and Module level controller is too great (time lag). Install volume booster in the signal line.
3. If reset is included:
The reset response setting may be too fast. Increase the reset time until stable control is maintained
Excessive offset. Check the reset line for leaks; these connections must be airtight.

No output change as level changes.

1. Check that all gasketed joints on the relay are tight.
2. Check for leaks.
3. Depress relay/wiper plunger since the orifice may be plugged.
4. Remove the enclosing tube and inspect it for internal buildup.
5. Unbolt the head assembly and check for displacer interference.

-
6. Remove parts from the head assembly and inspect internal components.
 7. Consult factory.
 8. Check sizing and operation of control valve. An oversized valve or excessive friction are possibilities.
 9. Check the output capacity. Controllers tend to be unstable when dead-ended due to their high degree of sensitivity. This condition is particularly aggravated when coupled with 1 and 8 above.

3.2 Specifications

3.2.1 Standard Flanged Top and Flanged Cage Displacer Models P61, P62, P63, P64, P65 and P66 Dimensional Specifications

Inches (mm)

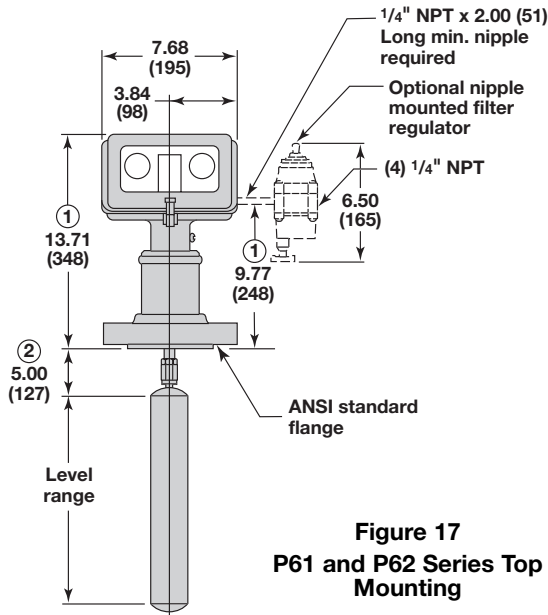


Figure 17
P61 and P62 Series Top Mounting

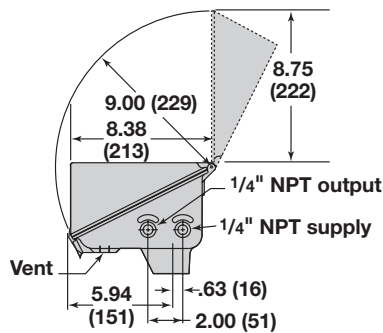


Figure 19
Controller Head (side view)

| Outlet Size | Dimension A |
|---------------------------|-------------|
| 1 1/2" NPT or Socket Weld | 3.19 (81) |
| 2" NPT or Socket Weld | 3.31 (84) |

| Outlet Size | Dimension B |
|----------------|-------------|
| 1 1/2" Flanged | 6.25 (159) |
| 2" Flanged | 6.25 (159) |

| Flange Size & Class | Dimension C |
|-----------------------|-------------|
| 1 1/2" or 2", 150 lb. | 7.50 (191) |
| 1 1/2" or 2", 300 lb. | 8.25 (210) |
| 1 1/2" or 2", 600 lb. | 8.25 (210) |

① Add 3.12 (79) for units with specific gravity and temperature codes 4, 5 or 6.

② Distance without stem extension is 5.00 (127) standard. Can be furnished to a minimum distance of 3.00 (76).

NOTE: Controller head may be rotated through 360°.

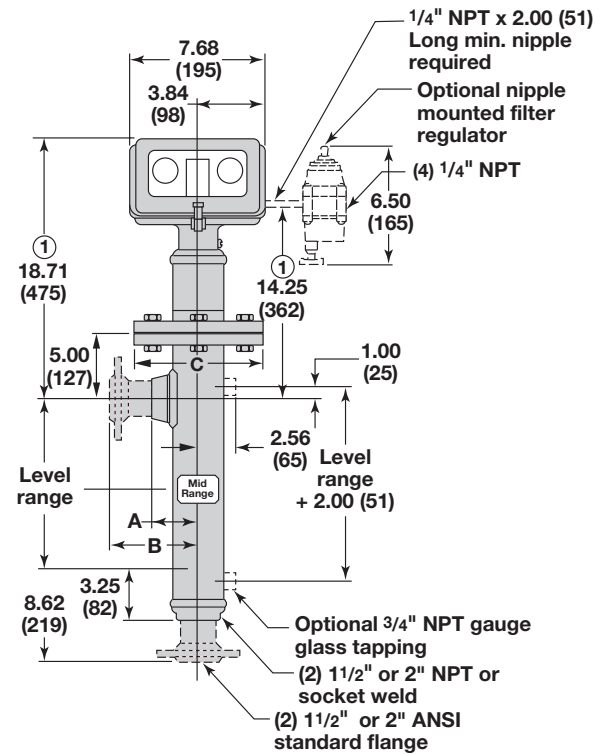


Figure 18
P63 and P64 Series with Side/Bottom Connections

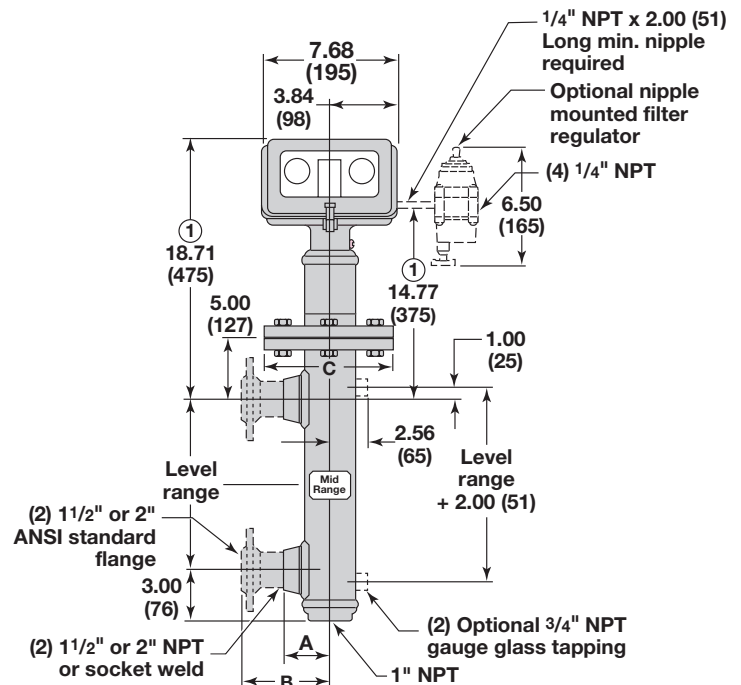


Figure 20
P65 and P66 Series with Side/Side Connections

3.2 Specifications

3.2.2 High Pressure Flanged Top and Flanged Cage Displacer Models P51, P53 and P55 Dimensional Specifications

Inches (mm)

NOTE: Controller head may be rotated through 360°.

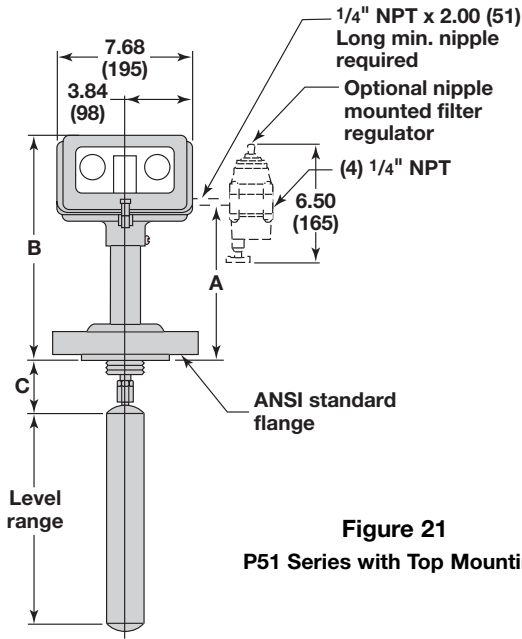


Figure 21
P51 Series with Top Mounting

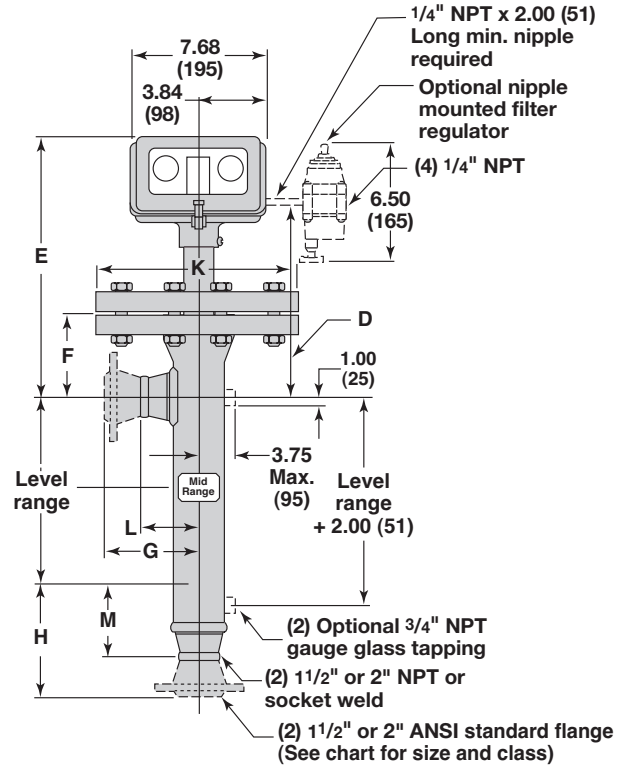


Figure 22
P53 Series with Upper Side/Bottom Connections

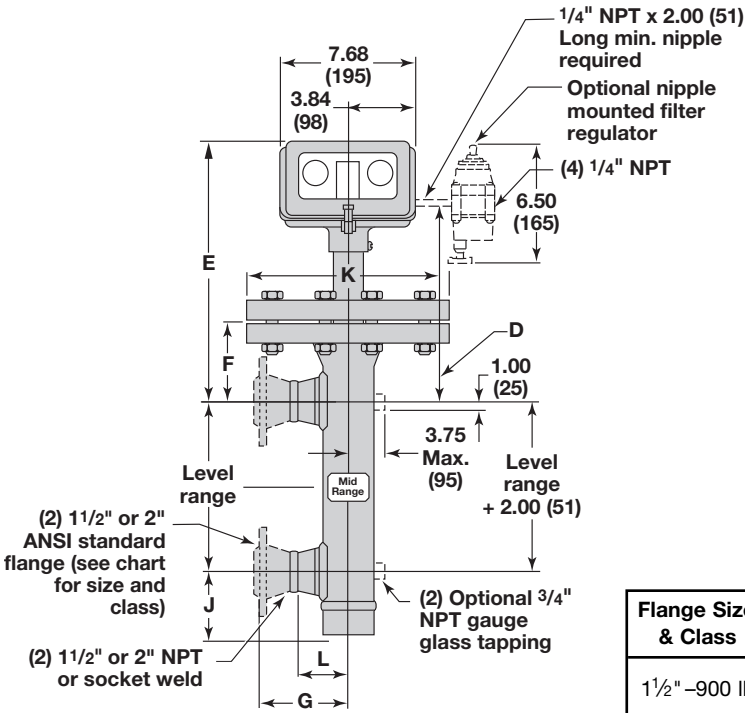


Figure 23
P55 Series with Side/Side Connections

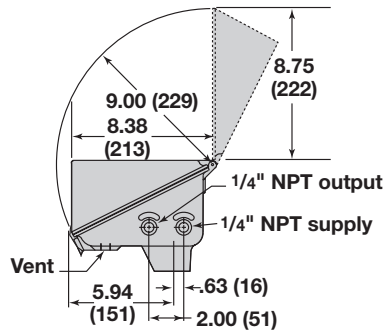


Figure 19
Controller Head
(side view)

| Outlet Size | Dimensions | |
|---------------------------|---------------|--------------|
| | L | M |
| 1 1/2" NPT or Socket Weld | 4.00 (102) | 3.44 (87) |
| 2" NPT or Socket Weld | 4.38 (111) | 3.50 (89) |

| Flange Size & Class | Dimensions | | | | | | | | | |
|---------------------|---------------|----------------|---------------|----------------|----------------|---------------|---------------|----------------|--------------|----------------|
| | A | B | C | D | E | F | G | H | J | K |
| 1 1/2" -900 lb. | 8.48 (215) | 12.41 (315) | 9.31 (236) | 17.96 (456) | 21.89 (556) | 9.31 (236) | 7.25 (184) | 8.43 (214) | 3.44 (87) | 11.50 (292) |
| 2" -900 lb. | | | | | | | 8.18 (208) | 9.38 (238) | | |
| 1 1/2" -1500 lb. | 8.86 (225) | 12.79 (325) | 9.31 (236) | 18.34 (466) | 22.27 (566) | 9.31 (236) | 7.93 (201) | 9.13 (232) | 3.44 (87) | 12.25 (311) |
| 2" -1500 lb. | | | | | | | 8.87 (225) | 10.13 (257) | | |
| 1 1/2" -2500 lb. | 9.73 (247) | 13.66 (347) | 9.31 (236) | 19.21 (488) | 23.14 (588) | 9.31 (236) | 9.06 (230) | 10.25 (267) | 3.44 (87) | 14.00 (356) |
| 2" -2500 lb. | | | | | | | 9.87 (251) | 11.13 (283) | | |

3.2 Specifications

3.2.3 Standard Sealed Cage Displacer Models P71 and P72 Dimensional Specifications

Inches (mm)

NOTE: Controller head may be rotated through 360°.

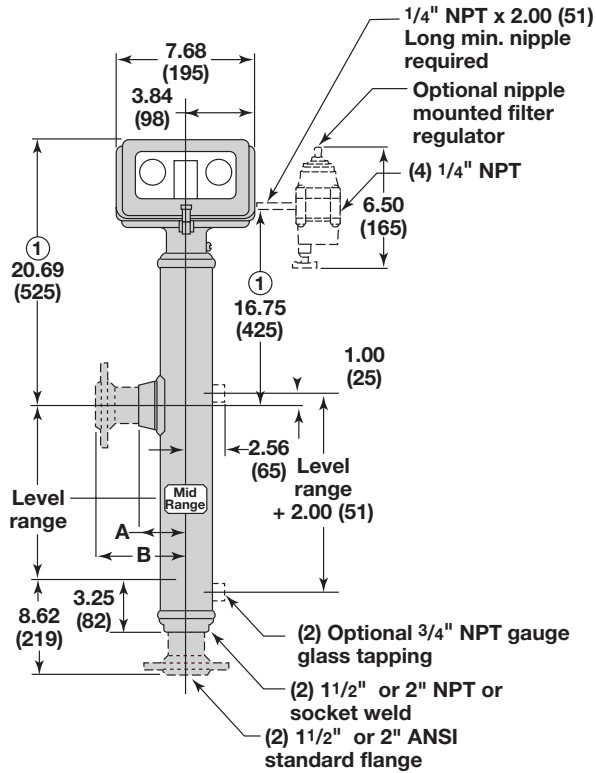


Figure 24

P71 Series with Upper Side/Bottom Connections 150, 300, 600 lb. Class

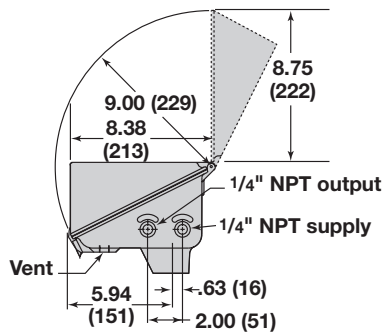


Figure 19

Controller Head (side view)

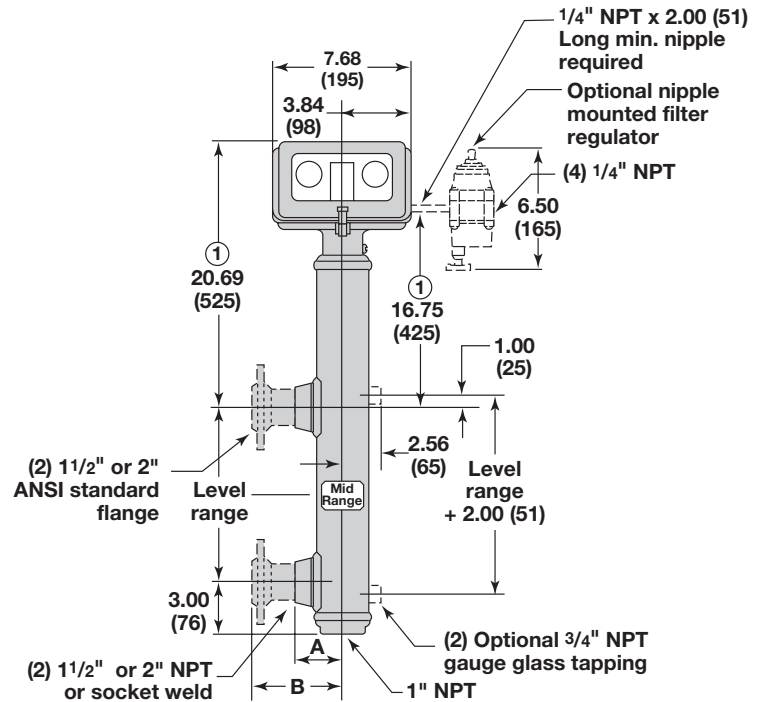


Figure 25

**P72 Series with Side/Side Connections
150, 300, 600 lb. Class**

| Outlet Size | Dimension A |
|------------------------|--------------|
| 1½" NPT or Socket Weld | 3.19 (81) |
| 2" NPT or Socket Weld | 3.31 (81) |

| Outlet Size | Dimension B |
|-------------|---------------|
| 1½" Flange | 6.25 (159) |
| 2" Flange | 6.25 (159) |

① Add 3.12 (79) for units with Specific Gravity Codes 4, 5 or 6.

600 lb. Pressure/temperature ratings

| Temperature | | Pressure | |
|-------------|------|----------|-----|
| ° F | ° C | psig | Bar |
| 100 | 37.7 | 1440 | 99 |
| 200 | 93 | 1240 | 85 |
| 300 | 149 | 1120 | 77 |
| 400 | 204 | 1020 | 70 |
| 500 | 260 | 940 | 65 |
| 600 | 315 | 900 | 62 |
| 700 | 371 | 860 | 59 |

3.2 Specifications

3.2.4 Models APM-131, APM-W251, APM-W254 and APM-W291 Dimensional Specifications inches (mm)

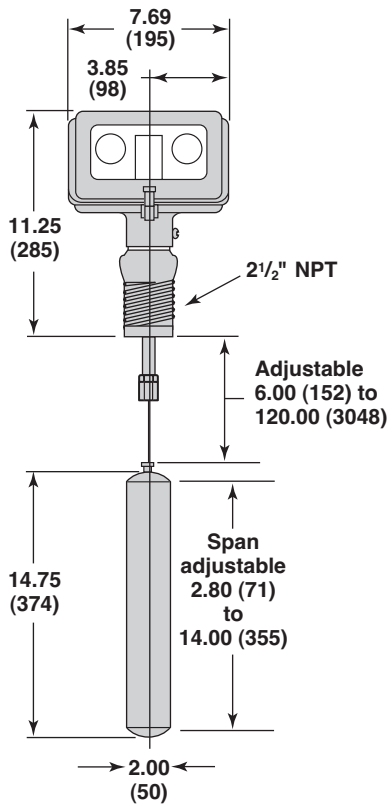


Figure 25
APM-131

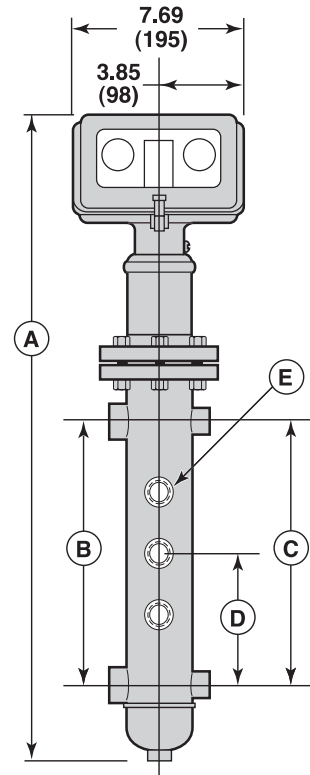


Figure 26
APM-W251, APM-W254, and APM-W291

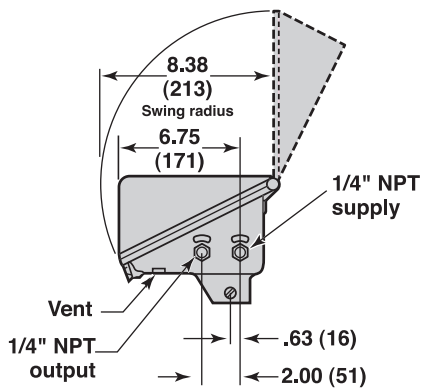


Figure 28
Controller Head (side view)

| Catalog Number | A | B Gauge glass centers and pipe size | C Drum connector centers and pipe size | D Mid range of throttling band | E Try-Cock tappings and pipe size |
|----------------|-------|--|---|-----------------------------------|--------------------------------------|
| APM-W251 | 25.62 | 13.50 1/2" NPT | 13.50 1" NPT | 6.00 | Three 1/2" NPT |
| APM-W254 | 29.50 | 15.00 3/4" NPT | 16.00 1 1/4" NPT | 8.00 | Six 3/4" NPT |
| APM-W291 | 30.50 | 15.00 3/4" NPT | 15.00 1 1/4" NPT | 7.50 | Three 3/4" NPT |

Dimensions are in inches and subject to change without notice. Certified and detailed submittal drawings are available from the factory.

3.3 Replacement Parts

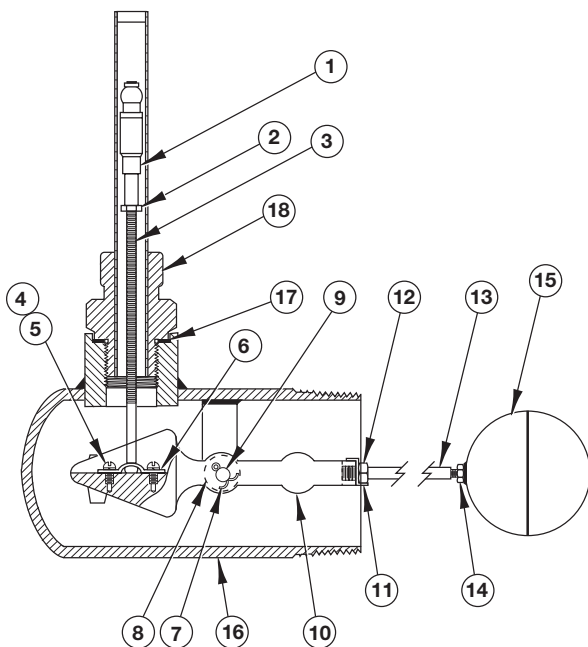


Figure 31

Typical Side Mounted Threaded Assembly

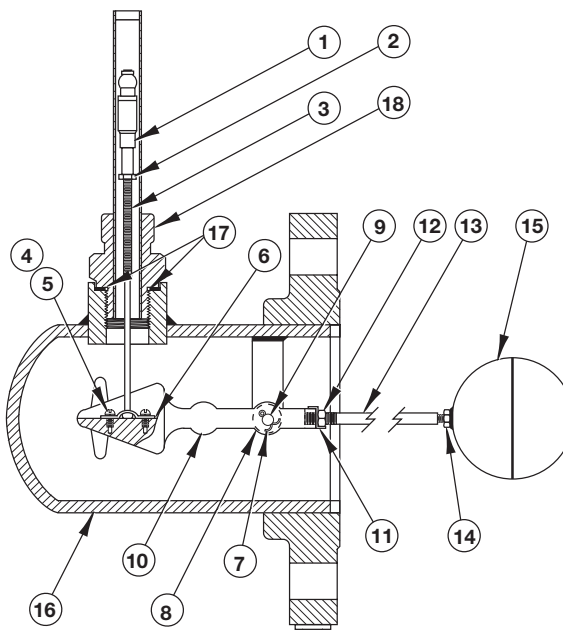


Figure 32

Typical Side Mounted Flanged Assembly

3.3.1 Model P68 Threaded and Flanged Parts Identification

| Item | Description |
|------|------------------------|
| 1 | Attraction Sleeve |
| 2 | Hex Nut #8-32 |
| 3 | Stem |
| 4 | Stem Retaining Bracket |
| 5 | Screw #6-32 |
| 6 | Bracket |
| 7 | Cotter Pin |
| 8 | Washer |
| 9 | Pivot Pin |
| 10 | Fulcrum |
| 11 | Lock Washer |
| 12 | Hex Nut #1/4-20 |
| 13 | Stem |
| 14 | Hex Nut #10-32 |
| 15 | Float |
| 16 | Body |
| 17 | E-Tube Gasket |
| 18 | Enclosing Tube |

IMPORTANT:

When ordering replacement parts, please specify: A. Model and serial number of control.
B. Name and number of replacement part.

3.3 Replacement Parts

3.3.1.1 Model P68-2F2A Threaded 3" NPT (See Figure 31)

| | | |
|----|--|--------------|
| | Sleeve and stem kit (includes items 1 through 14) | 89-5562-001 |
| 15 | Float | 07-1102-005 |
| 16 | Body | Z33-6120-003 |
| 17 | E-tube gasket | 12-1204-001 |
| 18 | Enclosing tube | Z32-6201-006 |

3.3.1.2 Models P68-2H3A, P68-2H4A and P68-2H5A 4" Flanged (See Figure 32)

| Item | Flanged cage | 150# | 300# | 600# |
|------|--|--------------|---------------------|--------------|
| | Sleeve and stem kit (includes items 1 through 14) | | 5562 89-5652-002 | |
| 15 | Float | | Z07-1102-005 | |
| 16 | Body | Z33-6118-001 | Z33-6118-002 | Z33-6118-002 |
| 17 | E-tube gasket | | 12-1204-001 | |
| 18 | Enclosing tube | | Z32-6201-006 | |

IMPORTANT:

When ordering replacement parts, please specify: A. Model and serial number of control.
B. Name and number of replacement part.

3.3 Replacement Parts

3.3.2 Model Series P6x Parts Identification

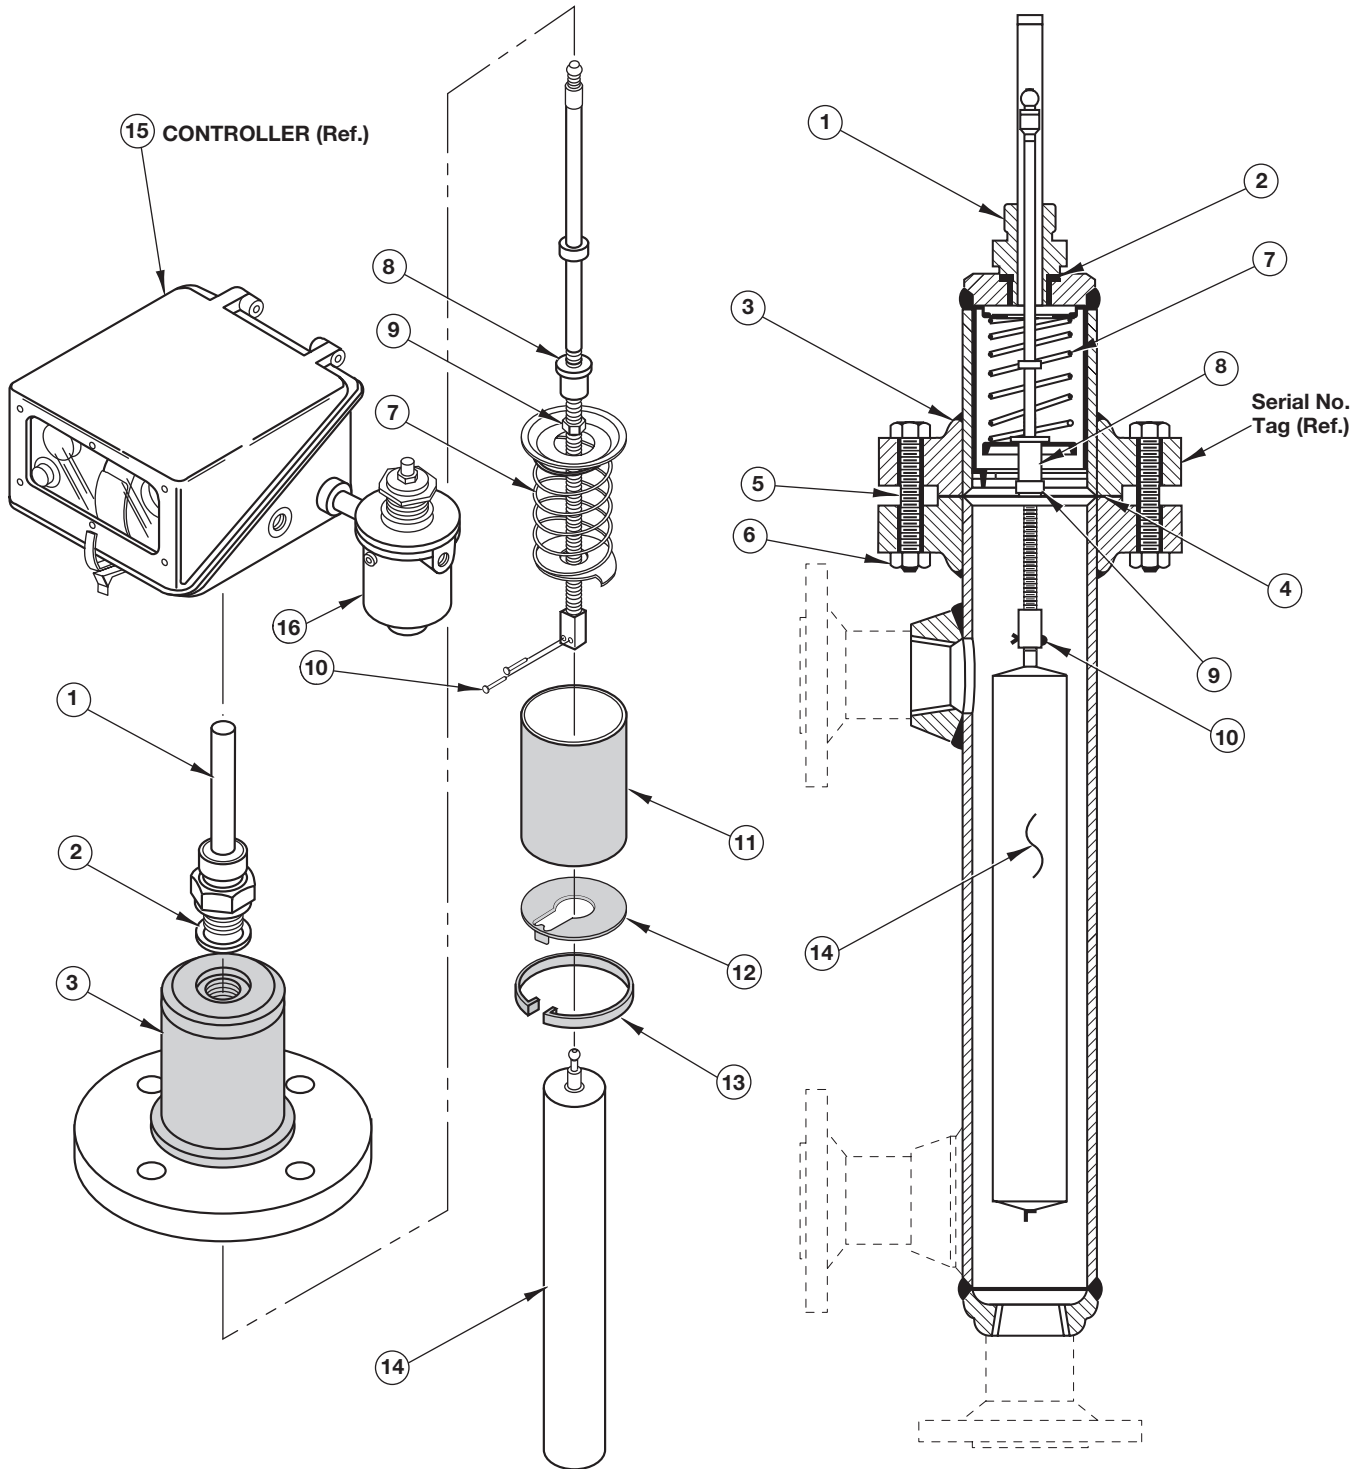


Figure 33

Typical Top Mounting Head Assembly
(Series P6x Shown)

Figure 34

Typical Fabricated External Cage Assembly
(Series P6x Shown)

3.3 Replacement Parts

3.3.2 Series P61, P62, P63, P64, P65, P66, P71 and P72 Parts Identification (See Figures 33 & 34)

| Item | Description |
|------|-----------------------|
| 1 | Enclosing tube |
| 2 | Enclosing tube gasket |
| 3 | Mounting head kit |
| 4 | Head flange gasket |
| 5 | Studs |
| 6 | Hex nuts |
| 7 | Stem and spring kit |
| 8 | Adjusting sleeve |
| 9 | Jam nut |
| 10 | Cotter pins |
| 11 | Spacer tube |
| 12 | Stop ring |
| 13 | Stop |
| 14 | Displacer |
| 15 | Controller case only |
| 16 | Filter regulator |
| 17 | Gauge (not shown) |

IMPORTANT:

When ordering replacement parts, please specify: A. Model and serial number of control.
B. Name and number of replacement part.

3.3 Replacement Parts

3.3.2.1 Series P61, P62, P63, P64, P65, P66, P71 and P72 (See Figures 33 & 34)

| Item | | Part Number | | |
|--|---|-----------------------|---|------------------------|
| | | Matl. | 400° F Max. | 700° F Max |
| 1 | Enclosing tube | C.S. | Z32-6201-006 | Z32-6201-002 |
| | | 304 | Z32-6201-007 | Z32-6201-008 |
| | | 316 | Z32-6201-001 | Z32-6201-003 |
| 2 | Enclosing tube gasket | | 12-1204-001 | |
| 3 | Mounting head kits | | Carbon Steel | Stainless Steel |
| | 150# flange 0.23 – 0.54 SG | | 89-4217-001 | 89-4238-001 |
| | 0.55 – 1.09 and 1.10 – 2.20 SG | | 89-4218-001 | 89-4238-002 |
| | 300# flange 0.23 – 0.54 SG | | 89-4219-001 | 89-4238-003 |
| | 0.55 – 1.09 and 1.10 – 2.20 SG | | 89-4220-001 | 89-4238-004 |
| | 600# flange 0.23 – 0.54 SG | | 89-4221-001 | 89-4238-005 |
| | 0.55 – 1.09 and 1.10 – 2.20 SG | | 89-4222-001 | 89-4238-006 |
| | | 150# | 300# | 600# |
| 4 | Head flange gasket | 12-1301-017 | 12-1301-018 | 12-1204-021 |
| 5 | Studs | 10-1701-004 | 10-1701-007 | 10-1701-020 |
| | | (4 required) | (8 required) | (8 required) |
| 6 | Hex nuts | 10-2104-011 | 10-2104-012 | 10-2104-012 |
| | | (8 required) | (16 required) | (16 required) |
| | | 0.23 – 0.54 SG | 0.55 – 1.09 SG | 1.10 – 2.20 SG |
| 7 | Stem and spring kits 4th digits 1, 2 & 3 (+400° F/+204° C maximum) | 89-5533-001 | 89-5532-001 | 89-5531-001 |
| 7 | Stem and spring kits 4th digits 4, 5 & 6 (+700° F/+371° C maximum) | 89-5533-002 | 89-5532-002 | 89-5531-002 |
| 8 | Adjusting sleeve | | 04-5359-123 | |
| 9 | Jam nut | | 10-2107-004 | |
| 10 | Cotter pins | | 10-5203-001 (2 required) | |
| | | Lgth. | 0.23 – 0.54 SG and 0.55 – 1.09SG | 1.10 – 2.20 SG |
| 14 | Displacer | 14" | 89-6125-001 | 89-6126-001 |
| | | 32" | 89-6125-002 | 89-6126-002 |
| | | 48" | 89-6125-003 | 89-6126-003 |
| | | 60" | 89-6125-004 | 89-6126-004 |
| | | 72" | 89-6125-005 | 89-6126-005 |
| | | 84" | 89-6125-006 | 89-6126-006 |
| | | 96" | 89-6125-007 | 89-6126-007 |
| | | 108" | 89-6125-008 | 89-6126-008 |
| | | 120" | 89-6125-009 | 89-6126-009 |
| 15 | Controller case only | | Pneumatic 46-1505-001 | |
| | Receiver | | 46-1505-002 | |
| 16 | Filter regulator | | 06-9501-002 | |
| | Gauge (not shown) | | 06-9501-003 | |
| Adjustable Hanger | | Lgth. (in) | Lgth. (m) | |
| Adjustable stainless suspension cable for flanged top mounting models | | 96 | 2.4 | 32-3110-001 |

3.3 Replacement Parts

3.3.3 Series P51, P53 and P55 Parts Identification (See Figures 33 & 34)

| Item | Description |
|------|-----------------------|
| 1 | Enclosing tube |
| 2 | Enclosing tube gasket |
| 3 | Head flange |
| 4 | Head flange gasket |
| 5 | Studs |
| 6 | Hex nuts |
| 7 | Stem and spring kit |
| 8 | Adjusting sleeve |
| 9 | Jam nut |
| 10 | Cotter pins |
| 11 | Displacer |
| 12 | Controller case only |
| 13 | Filter regulator |
| 14 | Gauge (not shown) |

IMPORTANT:

When ordering replacement parts, please specify: A. Model and serial number of control.
B. Name and number of replacement part.

3.3 Replacement Parts

3.3.3.1 Series P51, P53 and P55 (See Figures 33 & 34)

| Item | | Part Number | | |
|------|-----------------------|--------------------------|----------------|---------------|
| | | +700° F Max | | |
| 1 | Enclosing tube | C.S. | Z32-6206-001 | |
| 2 | Enclosing tube gasket | 12-1204-001 | | |
| | | 900# flange | 1500# flange | 2500# flange |
| 3 | Head flange | Z04-8606-001 | Z04-8606-002 | Z04-8606-003 |
| 4 | Head flange gasket | 12-1204-009 | 12-1204-010 | 12-1204-011 |
| 5 | Studs | 10-1701-022 | 10-1701-017 | 10-1701-023 |
| | | (4 required) | (6 required) | (8 required) |
| 6 | Hex nuts | 10-2104-016 | 10-2104-017 | 10-2104-019 |
| | | (8 required) | (12 required) | (16 required) |
| 7 | Stem and spring kit | 0.55 – 1.09 SG | | 32-8120-002 |
| 8 | Adjusting sleeve | 04-5359-123 | | |
| 9 | Jam nut | 10-2107-004 | | |
| 10 | Cotter pins | 10-5203-001 (2 required) | | |
| | | Lgth. | 0.55 – 1.09 SG | |
| 11 | Displacer | 14" | 89-6125-010 | |
| | | 32" | 89-6125-011 | |
| | | 48" | 89-6125-012 | |
| | | 60" | 89-6125-013 | |
| 12 | Controller Case Only | Pneumatic 46-1505-001 | | |
| | | Receiver 46-1505-002 | | |
| 13 | Filter Regulator | 06-9501-002 | | |
| 14 | Gauge (not shown) | 06-9501-003 | | |

IMPORTANT:

When ordering replacement parts, please specify: A. Model and serial number of receiver controller.
 B. Name and number of replacement assembly (kit).

3.3 Replacement Parts

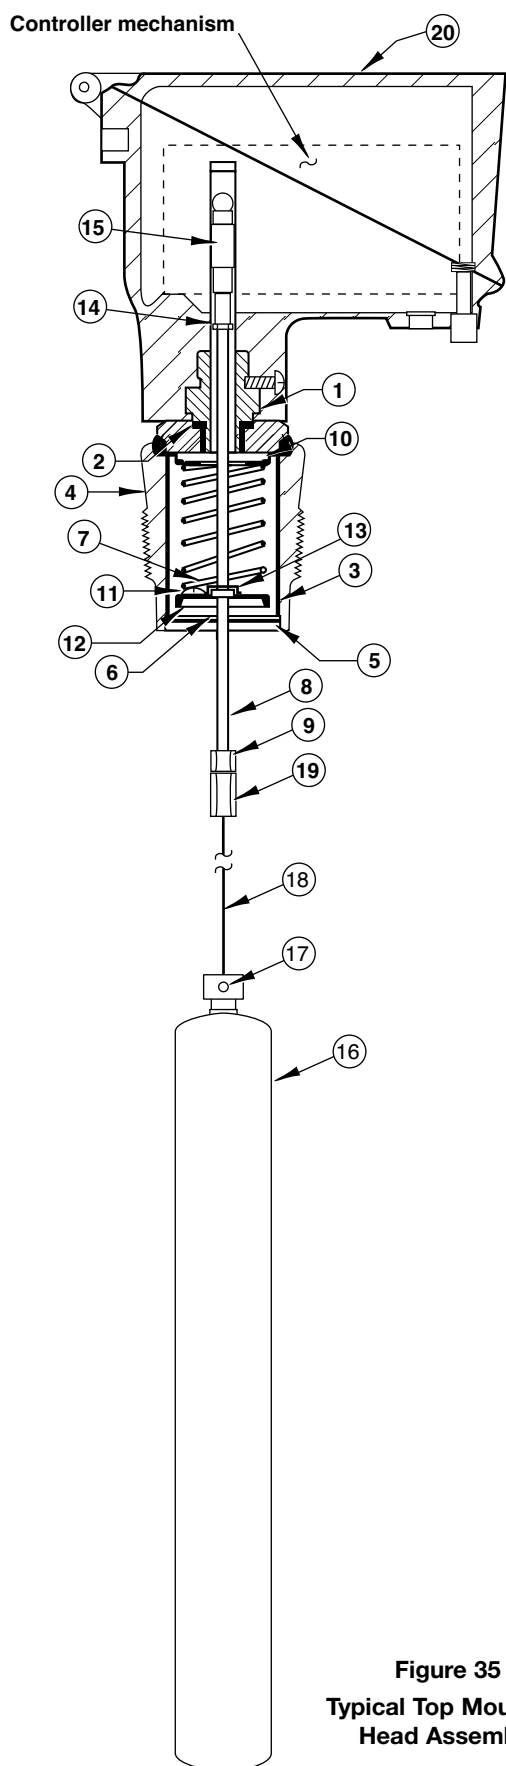


Figure 35
Typical Top Mounting
Head Assembly

3.3.4 Model APM-131 Parts Identification


| Item | Description |
|------|---------------------------------|
| 1 | Enclosing tube |
| 2 | Gasket (E-tube) |
| 3 | Spacer tube |
| 4 | Mounting bushing |
| 5 | Snap ring |
| 6 | Stop washer |
| 7 | Range spring |
| 8 | Connecting link |
| 9 | Lock nut |
| 10 | Spring cup (upper) |
| 11 | Screw |
| 12 | Spring cup (lower) |
| 13 | Retaining bracket |
| 14 | Jam nut |
| 15 | Attraction ball & stem assembly |
| 16 | Displacer |
| 17 | Clamp screw |
| 18 | Displacer cable |
| 19 | Connector nut |
| 20 | Controller case only |

3.3.4.1 Model APM-131 Part Number

| | | |
|----|--|--------------|
| 1 | Enclosing tube | Z32-6201-006 |
| | Gasket (E-tube) | 12-1204-001 |
| 2 | Mounting bushing kit (includes items 2 through 5) | 89-5703-001 |
| | Stem and spring kit (includes items 5 through 15) | 89-5505-001 |
| | Displacer kit (includes items 16 through 19) | 89-6106-001 |
| 20 | Controller case only | 46-1505-001 |

3.3 Replacement Parts

3.3.5 Models APM-W251, APM-W254 and APM-W291 Parts Identification

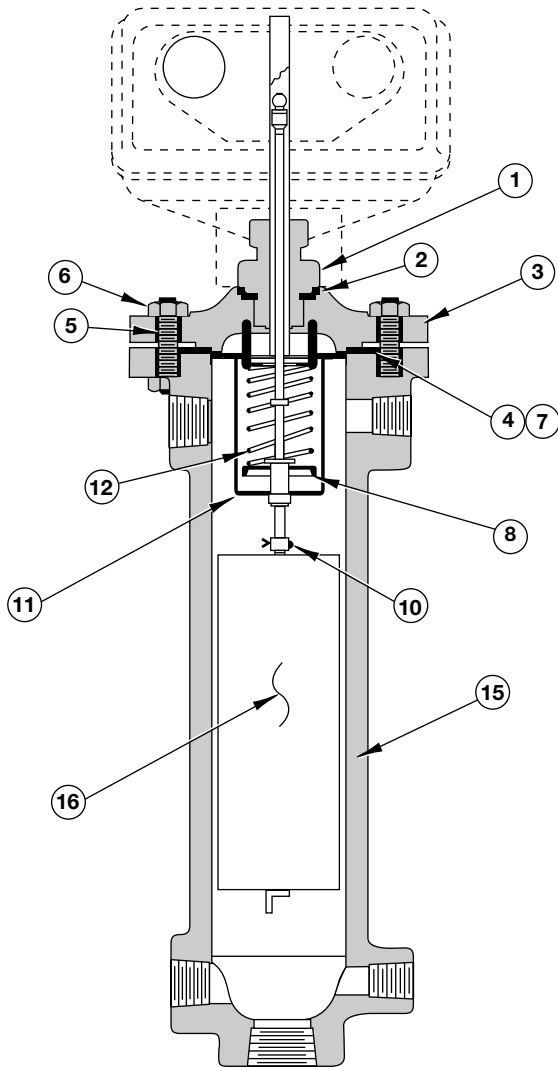

| Item | Description |
|------|---|
| 1 | Enclosing tube C.S. |
| 2 | Enclosing tube gasket |
| 3 | Head flange kit |
| 4 | Head flange gasket |
| 5 | Studs |
| 6 | Hex nuts |
| 7 | Head flange gasket |
| 8 | Spring mounting plate |
| 9 | Jam nut (not shown) |
| 10 | Cotter pin |
| 11 | Spring cup |
| 12 | Spring & stem assembly |
| 13 | Attraction sleeve (not shown) |
| 14 | Screws (not shown) |
| 15 | Chamber assembly |
| 16 | Displacer |
| 17 | Chamber liner (not shown) |
| 18 | Filter regulator (not shown) |
| 19 | Gauge (not shown) |
| 20 | Controller case only (shown on page 14) |

Figure 36
Typical Carbon Steel Fabricated
External Cage Assembly

IMPORTANT:

When ordering replacement parts, please specify:

- A. Model and serial number of receiver controller.
- B. Name and number of replacement assembly (kit).

3.3 Replacement Parts

3.3.5.1 Models APM-W251, APM-W254 and APM-W291 Parts Numbers

3.3.5.1.1 Model APM-W251 Part Number

| | | |
|-------------------------------|------------------------------|--------------|
| 1 | Enclosing tube C.S. | Z32-6201-006 |
| 2 | Enclosing tube gasket | 12-1204-001 |
| Head flange kit | | |
| (includes items 3 through 6) | | 89-4202-001 |
| Stem and spring kit | | |
| (includes items 7 through 14) | | 89-5320-001 |
| 10 | Cotter pin | 10-5202-005 |
| 15 | Chamber assembly | 89-4607-001 |
| 16 | Displacer | Z07-5422-001 |
| 17 | Chamber liner (not shown) | 89-4403-001 |
| 18 | Filter regulator (not shown) | 06-9501-002 |
| 19 | Gauge (not shown) | 06-9501-003 |
| 20 | Controller case only | |
| | (shown on page 14) | 46-1505-001 |

3.3.5.1.2 Model APM-W254 Part Number

| | | |
|-------------------------------|------------------------------|--------------|
| 1 | Enclosing tube C.S. | Z32-6201-006 |
| 2 | Enclosing tube gasket | 12-1204-001 |
| Head flange kit | | |
| (includes items 3 through 6) | | 89-4202-001 |
| Stem and spring kit | | |
| (includes items 7 through 14) | | 89-5320-001 |
| 10 | Cotter pin | 10-5202-005 |
| 15 | Chamber assembly | 89-4608-001 |
| 16 | Displacer | Z07-5421-121 |
| 17 | Chamber liner (not shown) | 89-4404-001 |
| 18 | Filter regulator (not shown) | 06-9501-002 |
| 19 | auge (not shown) | 06-9501-003 |
| 20 | Controller case only | |
| | (shown on page 14) | 46-1505-001 |

3.3.5.1.3 Model APM-W291 Part Number

| | | |
|-------------------------------|------------------------------|--------------|
| 1 | Enclosing tube C.S. | Z32-6201-006 |
| 2 | Enclosing tube gasket | 12-1204-001 |
| Head flange kit | | |
| (includes items 3 through 6) | | 89-4203-001 |
| Stem and spring kit | | |
| (includes items 7 through 14) | | 89-5320-001 |
| 10 | Cotter pin | 10-5202-005 |
| 15 | Chamber assembly | Z33-1004-001 |
| 16 | Displacer | Z07-5421-121 |
| 17 | Chamber liner (not shown) | N/A |
| 18 | Filter regulator (not shown) | 06-9501-002 |
| 19 | Gauge (not shown) | 06-9501-003 |
| 20 | Controller case only | |
| | (shown on page 14) | 46-1505-001 |

3.3 Replacement Parts

3.3.6 Controller Parts

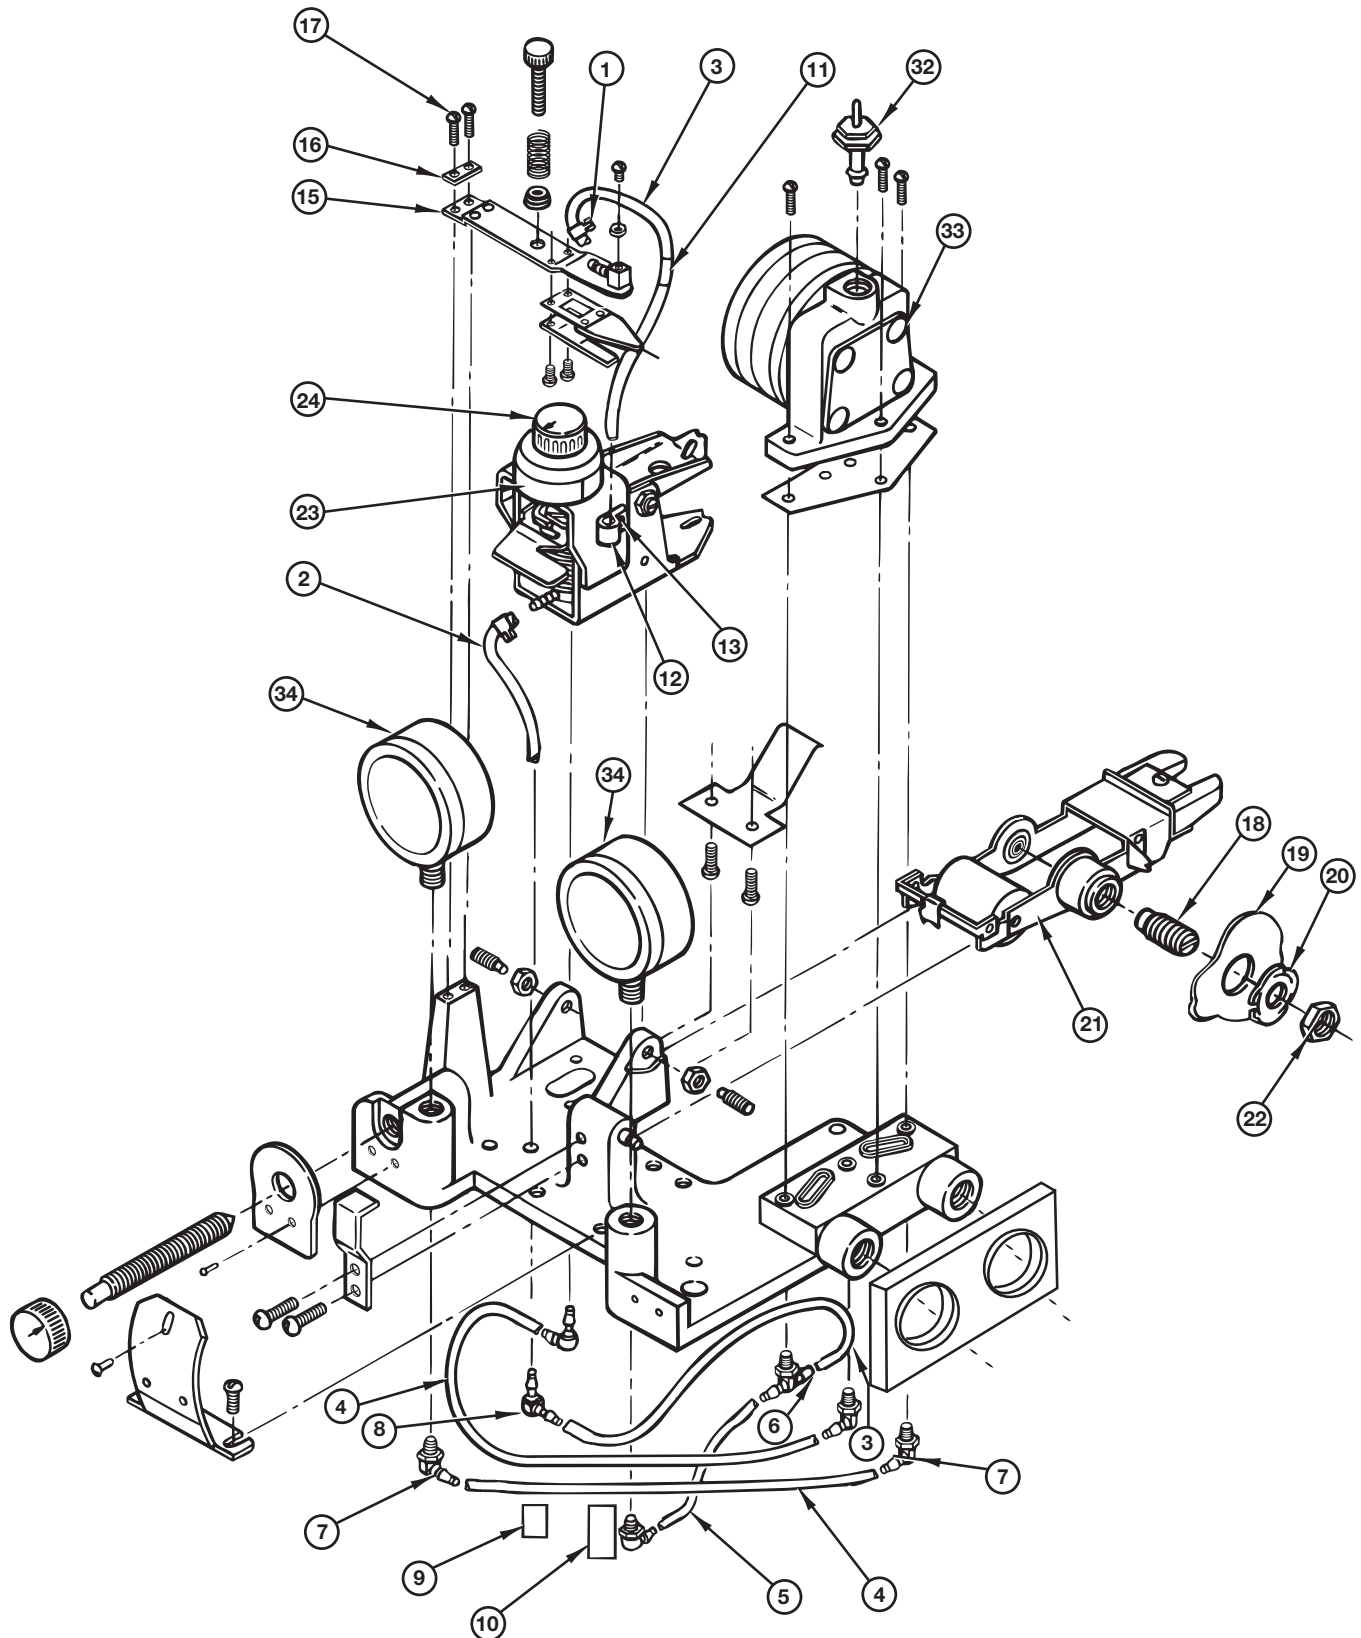


Figure 37
Controller Replacement Parts

3.3 Replacement Parts

3.3.6.1 Controller Replacement Assemblies Parts Identification (See Figures 37 & 38)

| Item | Description |
|------|----------------------------------|
| 1 | Compression ring |
| 2 | Tube, 2.25" length |
| 3 | Tube, 4.75" length |
| 4 | Tube, 7.75" length |
| 5 | Tube, 3.13" length |
| 6 | Barbed tee |
| 7 | Barbed elbow |
| 8 | Tube elbow |
| 9 | Silicone tape, 1.25" length |
| 10 | Silicone tape, 2.00" length |
| 11 | Silicone tape, .75" length |
| 12 | Cable clamp |
| 13 | #10-32 x .25 round head screw |
| 14 | Tube, 30" length |
| 15 | Nozzle level assembly |
| 16 | Plate |
| 17 | #4-40 x .25 round head screw |
| 18 | Bridge adjustment screw assembly |
| 19 | Selector cam |
| 20 | Spring washer |
| 21 | Magnetic carriage assembly |
| 22 | Palnut |
| 23 | Nameplate |
| 24 | Feedback assembly |
| 25 | Gasket |
| 26 | O-ring, Viton® |
| 27 | O-ring, Viton® |
| 28 | O-ring, Viton® |
| 29 | O-ring, Viton® |
| 30 | Gasket |
| 31 | Gasket, relay mounting |
| 32 | Wiper assembly |
| 33 | Relay assembly |
| 34 | Pressure gauge |

3.3 Replacement Parts^①

3.3.6.2 Tubing Kit 89-8501-015^② @ 3-15 and 6-30 psig (See Figure 37)

| Item | | Qty. |
|------|---------------------------------|------|
| 1 | Compression ring | 2 |
| 2 | Tube, 2.25" length ^③ | 1 |
| 3 | Tube, 4.75" length ^③ | 2 |
| 4 | Tube, 7.75" length ^③ | 2 |
| 5 | Tube, 3.13" length ^③ | 1 |
| 6 | Barbed tee | 1 |
| 7 | Barbed elbow | 4 |
| 8 | Tube elbow | 2 |
| 9 | Silicone tape, 1.25" length | 1 |
| 10 | Silicone tape, 2.00" length | 1 |
| 11 | Silicone tape, .75" length | 1 |
| 12 | Cable clamp | 1 |
| 13 | #10-32 x .25 round head screw | 1 |
| 14 | Tube, 30" length ^③ | 1 |

3.3.6.3 Nozzle Lever Kit 89-8501-002^④ @ 3-15 and 6-30 psig (See Figure 37)

| Item | | Qty. |
|------|---------------------------------|------|
| 11 | Silicone tape, .75" length | 1 |
| 12 | Cable clamp | 1 |
| 13 | #10-32 x .25 round head screw | 1 |
| 14 | Tube, 4.75" length ^③ | 1 |
| 15 | Nozzle level assembly | 1 |
| 16 | Plate | 1 |
| 17 | #4-40 x .25 round head screw | 2 |
| 1 | Compression ring | 1 |

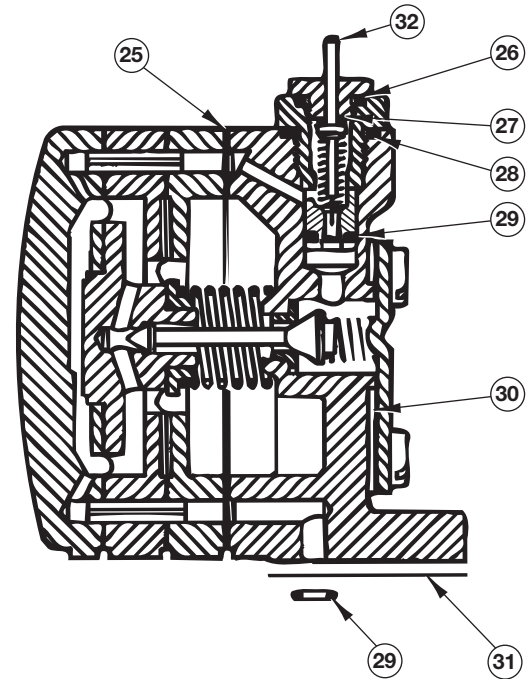


Figure 38
Relay Assembly (Item 33)

3.3.6.4 Carriage Assembly Kit 89-8501-003^④ @ 3-15 and 6-30 psig (See Figure 37)

| Item | | Qty. |
|------|----------------------------------|------|
| 18 | Bridge adjustment screw assembly | 1 |
| 19 | Selector cam | 1 |
| 20 | Spring washer | 1 |
| 21 | Magnetic carriage assembly | 1 |
| 22 | Palnut | 1 |

3.3 Replacement Parts

3.3.6.5 Feedback Assembly Kit 89-8501-005 @ 3–15 psig and 89-8501-006 @ 6–30 psig (See Figure 37)

| Item | | Qty. |
|------|---------------------------------|------|
| 1 | Compression ring | 2 |
| 2 | Tube, 7.50" length ^③ | 1 |
| 23 | Nameplate ^⑤ | 1 |
| 24 | Feedback assembly | 1 |

3.3.6.6 Gasket Kit for Relay Assembly 89-8501-014 @ 3–15 psig and 6–30 psig (See Figure 38)

| Item | | Qty. |
|------|---|------|
| 25 | Gasket | 1 |
| 26 | O-Ring, Viton [®] | 1 |
| 27 | O-Ring, Viton [®] | 1 |
| 28 | O-Ring, Viton [®] | 1 |
| 29 | O-Ring, Viton [®] ^⑥ | 2 |
| 30 | Gasket | 1 |
| 31 | Gasket, relay mounting | 1 |

3.3.6.7 Additional Replacement Parts (See Figures 37 & 38)

| Item | | Qty. | 3-15 psig | 6-30 psig |
|------|----------------|------|-------------|-------------|
| 34 | Pressure gauge | 1 | 06-8112-030 | 06-8112-060 |
| 32 | Wiper assembly | 1 | 89-7833-001 | |
| 33 | Relay assembly | 1 | 89-7803-001 | |

NOTE:

- ① Replacement assemblies listed are furnished in preassembled kit form only for standard temperature model proportional (P), proportional/reset (PR), differential gap (D), and transmitter (T) pneumatic controllers.
- ② Use tubing kit 89-8501-015 for units with brass fittings. Controller heads with reset require 4 compression rings. All others require 2. Use tubing kit 89-8501-001 for units with the plastic fittings (items 6, 7, and 8) and process temperature below +450° F (+232° C). Consult factory for units with plastic fittings and process temperatures above +450° F.

- ③ Customer is to cut tube lengths to correspond to those previously supplied on the unit.
- ④ Carriage assembly kit part number 89-8501-004 for Model P68 only.
- ⑤ Appropriate nameplate to be applied by customer, depending on application.
- ⑥ Used only when mating surface has counter bore, otherwise discard.

IMPORTANT:

When ordering replacement parts, please specify: A. Model and serial number of receiver controller.
B. Name and number of replacement assembly (kit).

3.3 Replacement Parts

3.3.7.1 Reset Replacement Assemblies (See Figures 39 & 40)

| Item | Qty. | Description |
|------|------|------------------------------|
| 1 | 1 | Valve assembly |
| 2 | 1 | Spacer |
| 3 | 1 | Dial |
| 4 | 1 | Set screw |
| 5 | 1 | Knob assembly |
| 6 | 2 | #2-56 x .33 round head screw |
| 7 | 1 | #4-40 x 16 bridge head screw |
| 8 | 1 | Washer |
| 9 | 1 | Spring, bias |
| 10 | 1 | Bellows assembly |
| 11 | 1 | Tube 8.50" length |
| 12 | 3 | Compression ring |
| 13 | 1 | Tube .81" length |
| 14 | 1 | Barbed tube tee |
| 15 | 1 | O-Ring, Viton® |
| 16 | 1 | O-Ring, Viton® |
| 17 | 1 | O-Ring, Viton® |
| 18 | 1 | O-Ring, Viton® |
| 19 | 2 | Seal washer |
| 20 | 2 | O-Ring, Viton® |
| 20 | 2 | Adapter |
| 22 | 1 | Air relief valve |
| 23 | 1 | O-Ring, Viton® |

3.3.7.2 Replacement Kits (See Figures 39 & 40)

| | 3-15 psig | 6-30 psig |
|--|-------------|-------------|
| Reset valve kit ^① includes items 1 through 14 | 89-8501-008 | 89-8501-009 |
| O-ring kit includes items 15 through 17 | 89-8501-010 | |
| Offshore kit ^② includes items 18 through 23 | 89-8501-007 | |

NOTE:

- ① Replacement assemblies listed are furnished in preassembled kit form only, complete with gaskets for field installation.
- ② The offshore kit allows air to exit the controller case while preventing air intake to the unit.

IMPORTANT:

When ordering replacement parts, please specify: A. Model and serial number of receiver controller.
B. Name and number of replacement assembly (kit).

3.3 Replacement Parts ^①

3.3.8 Receiver Controller Parts (See Figure 41)

| Item | Qty. | Description |
|------|------|------------------------|
| 1 | 1 | Nozzle lever |
| 2 | 1 | Bushing |
| 3 | 1 | Adjustment screw |
| 4 | 1 | Spring |
| 5 | 2 | #4-40 round head screw |
| 6 | 1 | Plate |
| 7 | 1 | #2-56 flat head screw |
| 8 | 1 | O-Ring, Viton® |
| 9 | 1 | Tube 7.75" length |
| 10 | 1 | Tape, silicone |
| 11 | 2 | Compression ring |
| 12 | 2 | #8-32 round head screw |
| 13 | 1 | Tube 4.75" length |
| 14 | 1 | Inlet connector |
| 15 | 1 | Input module |

3.3.8.1 Receiver Controller Replacement Assemblies (See Figure 41)

| | 3-15 psig | 6-30 psig |
|---|-------------|-------------|
| Receiver controller nozzle lever kit includes | | |
| items 1 through 11 | | 89-8501-011 |
| Input module kit includes items 11 through 15 | 89-8501-012 | 89-8501-013 |

NOTE:

① Replacement assemblies listed are furnished in preassembled kit form only for standard temperature model proportional (P), proportional w/reset (PR), and differential gap (D) receiver controllers.

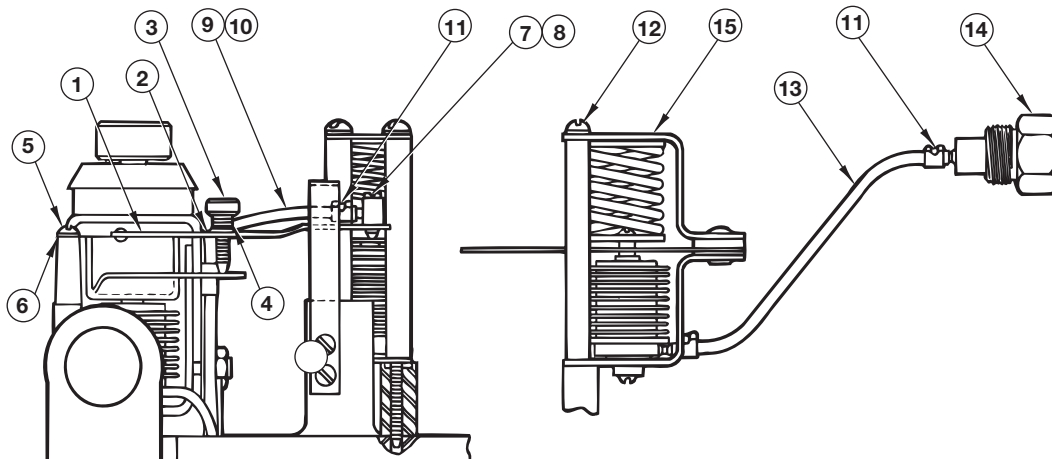


Figure 41
Receiver Controller Parts

3.3 Replacement Parts

3.3.9 Transmitter Mounted Receiver Controller Parts

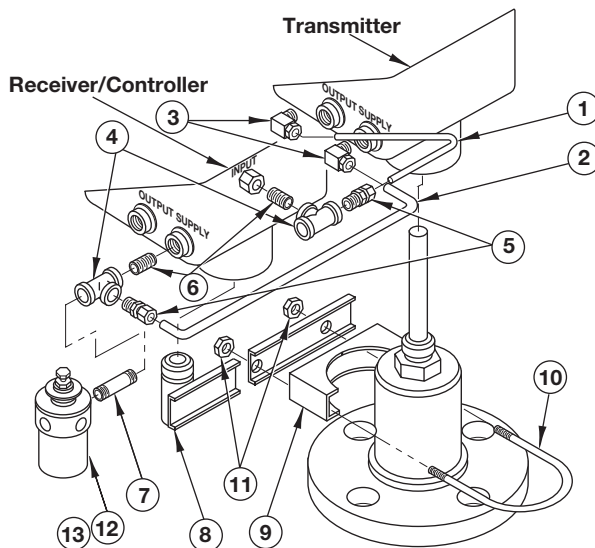


Figure 42
Transmitter Mounted Receiver Controllers
(Configuration A Shown)

3.3.9.1 Transmitter Mounted Receiver Controller Replacement Assemblies (See Figure 42)

| | | Replacement Assemblies | | | |
|------|--|------------------------|-------------|-----------------------------|-------------|
| | | Configuration A | | Configuration B (not shown) | |
| Item | | Qty. | Part No. | Qty. | Part No. |
| 1 | Output tube (item 1) | 1 | 04-7508-140 | 1 | 04-7508-140 |
| 2 | Supply tube (item 2) | 1 | 04-7406-001 | 1 | 04-7510-001 |
| 3 | Male elbow (item 3) | 2 | 11-4102-042 | 3 | 11-4102-042 |
| 4 | Tee (item 4) | 2 | 11-2212-001 | 2 | 11-2212-001 |
| 5 | Male connector (item 5) | 2 | 11-4707-002 | 1 | 11-4707-002 |
| 6 | 3/8" Close Nipple (item 6) | 2 | 11-1102-007 | 1 | 11-1102-007 |
| 7 | 1 1/4" nipple (item 7) | 1 | 11-1102-016 | 2 | 11-1102-016 |
| 8 | Bracket assembly (item 8) | 1 | 36-3802-001 | 1 | 36-3802-001 |
| | Saddle, U-bolt, hex nuts (items 9 through 11) | 1 | 10-1706-001 | 1 | 10-1706-001 |
| 12 | Filter regulator (item 12) | 1 | 06-9501-002 | 2 | 06-9501-002 |
| 13 | Gauge (item 13 – not shown) | 1 | 06-9501-003 | 2 | 06-9501-003 |

CONFIGURATION:

- A. For receiver-controller installation on transmitter with same input/output range.
- B. For receiver-controller installation on transmitter with different input/output range, requiring use of two filter regulators.

3.3 Replacement Parts

3.3.10 Pneumatic Modulelevel Replacement Head Kits

| 8th, 9th & 10th digits | Function | Supply Pressure | Output | Action | Limit Switches | Model Fourth Digit | | |
|------------------------|------------------|-----------------|--------------|---------|----------------|--------------------|-------------|-------------|
| | | | | | | 1 or 4 | 2 or 5 | 3 or 6 |
| PAA | proportional | 20 psig | 3–15 psig | direct | no | 89-8502-001 | 89-8502-033 | 89-8502-065 |
| PAB | proportional | 35 psig | 6–30 psig | direct | no | 89-8502-002 | 89-8502-034 | 89-8502-066 |
| PBA | prop. w/reset | 20 psig | 3–15 psig | direct | no | 89-8502-003 | 89-8502-035 | 89-8502-067 |
| PBB | prop. w/reset | 35 psig | 6–30 psig | direct | no | 89-8502-004 | 89-8502-036 | 89-8502-068 |
| PCA | transmitter | 20 psig | 3–15 psig | direct | no | 89-8502-005 | 89-8502-037 | 89-8502-069 |
| PCB | transmitter | 35 psig | 6–30 psig | direct | no | 89-8502-006 | 89-8502-038 | 89-8502-070 |
| PDA | differential gap | 20 psig | 0 or 20 psig | direct | no | 89-8502-007 | 89-8502-039 | 89-8502-071 |
| PDB | differential gap | 35 psig | 0 or 35 psig | direct | no | 89-8502-008 | 89-8502-040 | 89-8502-072 |
| PIA | proportional | 20 psig | 3–15 psig | direct | yes | 89-8502-017 | 89-8502-049 | 89-8502-081 |
| PIB | proportional | 20 psig | 6–30 psig | direct | yes | 89-8502-018 | 89-8502-050 | 89-8502-082 |
| PJA | prop. w/reset | 20 psig | 3–15 psig | direct | yes | 89-8502-019 | 89-8502-051 | 89-8502-083 |
| PJB | prop. w/reset | 35 psig | 6–30 psig | direct | yes | 89-8502-020 | 89-8502-052 | 89-8502-084 |
| PKA | transmitter | 20 psig | 3–15 psig | direct | yes | 89-8502-021 | 89-8502-053 | 89-8502-085 |
| PKB | transmitter | 35 psig | 6–30 psig | direct | yes | 89-8502-022 | 89-8502-054 | 89-8502-086 |
| PLA | differential gap | 20 psig | 0 or 20 psig | direct | no | 89-8502-023 | 89-8502-054 | 89-8502-087 |
| PLB | differential gap | 35 psig | 0 or 35 psig | direct | no | 89-8502-024 | 89-8502-055 | 89-8502-088 |
| PEA | proportional | 20 psig | 3–15 psig | reverse | no | 89-8502-009 | 89-8502-041 | 89-8502-073 |
| PEB | proportional | 35 psig | 6–30 psig | reverse | no | 89-8502-010 | 89-8502-042 | 89-8502-074 |
| PFA | prop. w/reset | 20 psig | 3–15 psig | reverse | no | 89-8502-011 | 89-8502-043 | 89-8502-075 |
| PFB | prop. w/reset | 35 psig | 6–30 psig | reverse | no | 89-8502-012 | 89-8502-044 | 89-8502-076 |
| PGA | transmitter | 20 psig | 3–15 psig | reverse | no | 89-8502-013 | 89-8502-045 | 89-8502-077 |
| PGB | transmitter | 35 psig | 6–30 psig | reverse | no | 89-8502-014 | 89-8502-046 | 89-8502-078 |
| PHA | differential gap | 20 psig | 0 or 20 psig | reverse | no | 89-8502-015 | 89-8502-047 | 89-8502-079 |
| PHB | differential gap | 35 psig | 0 or 35 psig | reverse | no | 89-8502-016 | 89-8502-048 | 89-8502-080 |
| PMA | proportional | 20 psig | 3–15 psig | reverse | yes | 89-8502-025 | 89-8502-057 | 89-8502-089 |
| PMB | proportional | 35 psig | 6–30 psig | reverse | yes | 89-8502-026 | 89-8502-058 | 89-8502-090 |
| PNA | prop. w/reset | 20 psig | 3–15 psig | reverse | yes | 89-8502-027 | 89-8502-059 | 89-8502-091 |
| PNB | prop. w/reset | 35 psig | 6–30 psig | reverse | yes | 89-8502-028 | 89-8502-060 | 89-8502-092 |
| POA | transmitter | 20 psig | 3–15 psig | reverse | yes | 89-8502-029 | 89-8502-061 | 89-8502-093 |
| POB | transmitter | 35 psig | 6–30 psig | reverse | yes | 89-8502-030 | 89-8502-062 | 89-8502-094 |
| PPA | differential gap | 20 psig | 0 or 20 psig | reverse | yes | 89-8502-031 | 89-8502-063 | 89-8502-095 |
| PPB | differential gap | 35 psig | 0 or 35 psig | reverse | yes | 89-8502-032 | 89-8502-064 | 89-8502-096 |

3.3 Replacement Parts

3.3.10 Pneumatic Modulelevel Replacement Head Kits (cont.)

| 8th, 9th & 10th digits | Function | Supply Pressure | Output | Action | Limit Switches | Model Fourth Digit | | |
|------------------------|------------------|-----------------|--------------|----------|----------------|--------------------|-------------|-------------|
| | | | | | | 1 or 4 | 2 or 5 | 3 or 6 |
| RAA* | proportional | 20 psig | 3–15 psig | direct | no | 89-8502-129 | 89-8502-145 | 89-8502-161 |
| RAB* | proportional | 35 psig | 6–30 psig | direct | no | 89-8502-130 | 89-8502-146 | 89-8502-162 |
| RBA* | prop. w/reset | 20 psig | 3–15 psig | direct | no | 89-8502-131 | 89-8502-147 | 89-8502-163 |
| RBB* | prop. w/reset | 35 psig | 6–30 psig | direct | no | 89-8502-132 | 89-8502-148 | 89-8502-164 |
| REA* | transmitter | 20 psig | 3–15 psig | reverset | no | 89-8502-133 | 89-8502-149 | 89-8502-165 |
| REB* | transmitter | 35 psig | 6–30 psig | reverse | no | 89-8502-134 | 89-8502-150 | 89-8502-166 |
| RFA* | differential gap | 20 psig | 3–15 psig | direct | no | 89-8502-135 | 89-8502-151 | 89-8502-167 |
| RFB* | differential gap | 35 psig | 6–30 psig | direct | no | 89-8502-136 | 89-8502-152 | 89-8502-168 |
| TAA | proportional | 20 psig | 3–15 psig | direct | no | 89-8502-137 | 89-8502-153 | 89-8502-169 |
| TAB* | proportional | 20 psig | 6–30 psig | direct | no | 89-8502-138 | 89-8502-154 | 89-8502-170 |
| TBA* | prop. w/reset | 20 psig | 3–15 psig | direct | no | 89-8502-139 | 89-8502-155 | 89-8502-171 |
| TBB* | prop. w/reset | 35 psig | 6–30 psig | direct | no | 89-8502-140 | 89-8502-156 | 89-8502-172 |
| TEA* | transmitter | 20 psig | 3–15 psig | direct | no | 89-8502-141 | 89-8502-157 | 89-8502-173 |
| TEB* | transmitter | 35 psig | 6–30 psig | direct | no | 89-8502-142 | 89-8502-158 | 89-8502-174 |
| TFA* | differential gap | 20 psig | 3–15 psig | direct | no | 89-8502-143 | 89-8502-159 | 89-8502-175 |
| TFB* | differential gap | 35 psig | 6–30 psig | direct | no | 89-8502-144 | 89-8502-160 | 89-8502-176 |
| PAJ | proportional | 20 psig | 3–15 psig | direct | no | n/a | 89-8502-097 | n/a |
| PAK | proportional | 35 psig | 6–30 psig | reverse | no | n/a | 89-8502-098 | n/a |
| PBJ | prop. w/reset | 20 psig | 3–15 psig | reverse | no | n/a | 89-8502-099 | n/a |
| PBK | prop. w/reset | 35 psig | 6–30 psig | reverse | no | n/a | 89-8502-100 | n/a |
| PCJ | transmitter | 20 psig | 3–15 psig | reverse | no | n/a | 89-8502-101 | n/a |
| PCK | transmitter | 35 psig | 6–30 psig | reverse | no | n/a | 89-8502-102 | n/a |
| PDJ | differential gap | 20 psig | 0 or 20 psig | reverse | no | n/a | 89-8502-103 | n/a |
| PDK | differential gap | 35 psig | 0 or 35 psig | reverse | no | n/a | 89-8502-104 | n/a |
| PEJ | proportional | 20 psig | 3–15 psig | reverse | no | n/a | 89-8502-105 | n/a |
| PEK | proportional | 35 psig | 6–30 psig | reverse | no | n/a | 89-8502-106 | n/a |
| PFJ | prop. w/reset | 20 psig | 3–15 psig | reverse | no | n/a | 89-8502-107 | n/a |
| PFK | prop. w/reset | 35 psig | 6–30 psig | reverse | no | n/a | 89-8502-108 | n/a |
| PGJ | transmitter | 20 psig | 3–15 psig | reverse | no | n/a | 89-8502-109 | n/a |
| PGK | transmitter | 35 psig | 6–30 psig | reverse | no | n/a | 89-8502-110 | n/a |
| PHJ | differential gap | 20 psig | 0 or 20 psig | reverse | no | n/a | 89-8502-111 | n/a |
| PHK | differential gap | 35 psig | 0 or 35 psig | reverse | no | n/a | 89-8502-112 | n/a |

* Kits for receiver controllers include both heads

3.4 Model Numbers

3.4.1 Standard Flanged Top and Flanged Cage Displacer Models

DESIGN TYPE

| | |
|-----|---------------------------------------|
| P 6 | Standard design Pneumatic Modulelevel |
|-----|---------------------------------------|

MOUNTING AND CHAMBER MATERIALS

| flanged top ① | | cage side/bottom | | cage side/side | | tank connection |
|---------------|--------|------------------|--------|----------------|--------|------------------|
| steel | 316 SS | steel | 316 SS | steel | 316 SS | chamber material |
| 1 | 2 | 3 | 4 | 5 | 6 | code |

① Adjustable 8' hanger cable (p/n 32-3110-001), required when distance from flange face to top of displacer must be greater than 5.00"

SPECIFIC GRAVITY AND PROCESS TEMPERATURE

| +300° F (+150° C) | +400° F (+200° C) ② | maximum temperature |
|-------------------|---------------------|------------------------------|
| 1 | 4 | 0.23 – 0.54 specific gravity |
| 2 | 5 | 0.55 – 1.09 specific gravity |
| 3 | 6 | 1.10 – 2.20 specific gravity |

② Inconel spring furnished on models P62, P64 and P66 with codes 4, 5, or 6

TANK CONNECTION

Top mounted connection type

| ANSI Head Flange rating | | | |
|-------------------------|------------|------------|------|
| RF 150 lbs | RF 300 lbs | RF 600 lbs | Size |
| G3 | G4 | G5 | 3" |
| H3 | H4 | H5 | 4" |
| K3 | K4 | K5 | 6" |


External cage models

| ANSI Cage rating | | | |
|------------------|------------|------------|-------------|
| RF 150 lbs | RF 300 lbs | RF 600 lbs | Size / Type |
| C5 | C7 | C9 | 1½" NPT |
| C6 | C8 | C0 | 1½" S.W. |
| P3 | P4 | P5 | 1½" flanged |
| D5 | D7 | D9 | 2" NPT |
| D6 | D8 | D0 | 2" S.W. |
| Q3 | Q4 | Q5 | 2" flanged |

LEVEL RANGE

| | | | | | | | | | |
|-----|-----|------|------|------|------|------|------|------|--------|
| 14 | 32 | 48 | 60 | 72 | 84 | 96 | 108 | 120 | inches |
| 356 | 813 | 1219 | 1524 | 1829 | 2134 | 2438 | 2743 | 3048 | mm |
| A | B | C | D | E | F | G | H | I | code |

PNEUMATIC INSTRUMENT (see opposite page)



complete order code for Standard Pneumatic Modulelevel

3.4 Model Numbers

3.4.1 Standard Flanged Top and Flanged Cage Displacer Models (continued)

| PNEUMATIC INSTRUMENT Single Function Heads | | | | | | |
|---|------------|----------------|------------|----------------------|-----------|----------|
| Direct Acting | | Reverse Acting | | Function | Output | Mounting |
| Std | Limit Sws | Std | Limit Sws | | | |
| PAA | PIA | PEA | PMA | Proportional | 3–15 psig | Integral |
| PAB | PIB | PEB | PMB | Proportional | 6–30 psig | Integral |
| PBA | PJA | PFA | PNA | Proportional w/reset | 3–15 psig | Integral |
| PBB | PJB | PFB | PNB | Proportional w/reset | 6–30 psig | Integral |
| PCA | PKA | PGA | POA | Transmitter | 3–15 psig | Integral |
| PCB | PKB | PGB | POB | Transmitter | 6–30 psig | Integral |
| PDA | PLA | PHA | PPA | Differential Gap | 0–20 psig | Integral |
| PDB | PLB | PHB | PPB | Differential Gap | 0–35 psig | Integral |
| TRANSMITTER/RECEIVER CONTROLLER Dual Heads | | | | | | |
| Direct Acting | | Reverse Acting | | Function | Output | Mounting |
| Std | Limit Sws | Std | Limit Sws | | | |
| RAA | n/a | REA | n/a | Proportional | 3–15 psig | Integral |
| RAB | n/a | REB | n/a | Proportional | 6–30 psig | Integral |
| RBA | n/a | RFA | n/a | Proportional w/reset | 3–15 psig | Integral |
| RBB | n/a | RFB | n/a | Proportional w/reset | 6–30 psig | Integral |
| TAA | n/a | TEA | n/a | Proportional | 3–15 psig | Remote |
| TAB | n/a | TEB | n/a | Proportional | 6–30 psig | Remote |
| TBA | n/a | TFA | n/a | Proportional w/reset | 3–15 psig | Remote |
| TBB | n/a | TFB | n/a | Proportional w/reset | 6–30 psig | Remote |

3.4 Model Numbers

3.4.2 High Pressure Flanged Top and Flanged Cage Displacer Models

DESIGN TYPE

| | |
|-----|--|
| P 5 | High pressure design Pneumatic Modulelevel |
|-----|--|

MOUNTING AND CHAMBER MATERIALS ①

| flanged top ② | cage side/bottom | cage side/side | tank connection |
|---------------|------------------|----------------|------------------|
| steel | steel | steel | chamber material |
| 1 | 3 | 5 | code |

- ① P50 Series displacer material is 304 stainless steel.
- ② Adjustable 8' hanger cable (p/n 32-3110-001), required when distance from flange face to top of displacer must be greater than 9.31."

SPECIFIC GRAVITY AND PROCESS TEMPERATURE

| | |
|-------------------|------------------------------|
| +700° F (+371° C) | maximum temperature |
| 5 | 0.55 – 1.09 specific gravity |

TANK CONNECTION

Top mounted connection type

| ANSI HEAD Flange rating | | | |
|-------------------------|-------------|-------------|------|
| RF 900 lbs | RF 1500 lbs | RF 2500 lbs | Size |
| H6 | H7 | H8 | 4" |


External cage models

| ANSI Cage rating | | | |
|------------------|-------------|-------------|-------------|
| RF 900 lbs | RF 1500 lbs | RF 2500 lbs | Size / Type |
| L5 | L7 | L9 | 1½" NPT |
| M5 | M7 | M9 | 1½" S.W. |
| P6 | P7 | P8 | 1½" flanged |
| L6 | L8 | L0 | 2" NPT |
| M6 | M8 | M0 | 2" S.W. |
| Q6 | Q7 | Q8 | 2" flanged |

LEVEL RANGE

| | | | | |
|-----|-----|------|------|--------|
| 14 | 32 | 48 | 60 | inches |
| 356 | 813 | 1219 | 1524 | mm |
| A | B | C | D | code |

PNEUMATIC INSTRUMENT



complete order code for High Pressure Pneumatic Modulelevel

3.4 Model Numbers

3.4.2 High Pressure Flanged Top and Flanged Cage Displacer Models (continued)

| PNEUMATIC INSTRUMENT Single Function Heads | | | | | | |
|---|------------|----------------|------------|----------------------|-----------|----------|
| Direct Acting | | Reverse Acting | | Function | Output | Mounting |
| Std | Limit Sws | Std | Limit Sws | | | |
| PAA | PIA | PEA | PMA | Proportional | 3–15 psig | Integral |
| PAB | PIB | PEB | PMB | Proportional | 6–30 psig | Integral |
| PBA | PJA | PFA | PNA | Proportional w/reset | 3–15 psig | Integral |
| PBB | PJB | PFB | PNB | Proportional w/reset | 6–30 psig | Integral |
| PCA | PKA | PGA | POA | Transmitter | 3–15 psig | Integral |
| PCB | PKB | PGB | POB | Transmitter | 6–30 psig | Integral |
| PDA | PLA | PHA | PPA | Differential Gap | 0–20 psig | Integral |
| PDB | PLB | PHB | PPB | Differential Gap | 0–35 psig | Integral |
| TRANSMITTER/RECEIVER CONTROLLER Dual Heads | | | | | | |
| Direct Acting | | Reverse Acting | | Function | Output | Mounting |
| Std | Limit Sws | Std | Limit Sws | | | |
| RAA | n/a | REA | n/a | Proportional | 3–15 psig | Integral |
| RAB | n/a | REB | n/a | Proportional | 6–30 psig | Integral |
| RBA | n/a | RFA | n/a | Proportional w/reset | 3–15 psig | Integral |
| RBB | n/a | RFB | n/a | Proportional w/reset | 6–30 psig | Integral |
| TAA | n/a | TEA | n/a | Proportional | 3–15 psig | Remote |
| TAB | n/a | TEB | n/a | Proportional | 6–30 psig | Remote |
| TBA | n/a | TFA | n/a | Proportional w/reset | 3–15 psig | Remote |
| TBB | n/a | TFB | n/a | Proportional w/reset | 6–30 psig | Remote |

3.4 Model Numbers

3.4.3 Standard Sealed Cage Displacer Models

DESIGN TYPE

| | |
|-----|--|
| P 7 | Sealed cage design Pneumatic Modulelevel |
|-----|--|

MOUNTING AND CHAMBER MATERIALS ①

| | | | | |
|----------------|-----------|-------------|-----------|------------------|
| Carbon steel ① | | 316 SS ① | | chamber material |
| side/bottom | side/side | side/bottom | side/side | tank connections |
| 1 | 2 | 3 | 4 | code |

① Inconel spring furnished on all models except P73 and P74 with S.G. and temperature codes 1, 2, & 3 which use a stainless steel spring.

SPECIFIC GRAVITY AND PROCESS TEMPERATURE

| | | |
|-------------------|-------------------|------------------------------|
| +400° F (+200° C) | +700° F (+371° C) | maximum temperature |
| 1 | 4 | 0.23 – 0.54 specific gravity |
| 2 | 5 | 0.55 – 1.09 specific gravity |
| 3 | 6 | 1.10 – 2.20 specific gravity |

TANK CONNECTION


EXTERNAL CAGE MODELS

| | | | | | |
|-----------------------------|----|-----------|-----------|------------|------|
| ANSI Mounting flange rating | | | | | |
| NPT | SW | RF 150lbs | RF 300lbs | RF 600 lbs | Size |
| C9 | C0 | P3 | P4 | P5 | 1½" |
| D9 | D0 | Q3 | Q4 | Q5 | 2" |

LEVEL RANGE

| | | | | | | | | | |
|-----|-----|------|------|------|------|------|------|------|--------|
| 14 | 32 | 48 | 60 | 72 | 84 | 96 | 108 | 120 | inches |
| 356 | 813 | 1219 | 1524 | 1829 | 2134 | 2438 | 2743 | 3048 | mm |
| A | B | C | D | E | F | G | H | I | code |

PNEUMATIC INSTRUMENT (see opposite page)



complete order code for Sealed Cage Pneumatic Modulelevel

3.4 Model Numbers

3.4.3 Standard Sealed Cage Displacer Models (continued)

| PNEUMATIC INSTRUMENT Single Function Heads | | | | | | |
|---|------------|----------------|------------|----------------------|-----------|----------|
| Direct Acting | | Reverse Acting | | Function | Output | Mounting |
| Std | Limit Sws | Std | Limit Sws | | | |
| PAA | PIA | PEA | PMA | Proportional | 3–15 psig | Integral |
| PAB | PIB | PEB | PMB | Proportional | 6–30 psig | Integral |
| PBA | PJA | PFA | PNA | Proportional w/reset | 3–15 psig | Integral |
| PBB | PJB | PFB | PNB | Proportional w/reset | 6–30 psig | Integral |
| PCA | PKA | PGA | POA | Transmitter | 3–15 psig | Integral |
| PCB | PKB | PGB | POB | Transmitter | 6–30 psig | Integral |
| PDA | PLA | PHA | PPA | Differential Gap | 0–20 psig | Integral |
| PDB | PLB | PHB | PPB | Differential Gap | 0–35 psig | Integral |
| TRANSMITTER/RECEIVER CONTROLLER Dual Heads | | | | | | |
| Direct Acting | | Reverse Acting | | Function | Output | Mounting |
| Std | Limit Sws | Std | Limit Sws | | | |
| RAA | n/a | REA | n/a | Proportional | 3–15 psig | Integral |
| RAB | n/a | REB | n/a | Proportional | 6–30 psig | Integral |
| RBA | n/a | RFA | n/a | Proportional w/reset | 3–15 psig | Integral |
| RBB | n/a | RFB | n/a | Proportional w/reset | 6–30 psig | Integral |
| TAA | n/a | TEA | n/a | Proportional | 3–15 psig | Remote |
| TAB | n/a | TEB | n/a | Proportional | 6–30 psig | Remote |
| TBA | n/a | TFA | n/a | Proportional w/reset | 3–15 psig | Remote |
| TBB | n/a | TFB | n/a | Proportional w/reset | 6–30 psig | Remote |

3.4 Model Numbers

3.4.4 Standard Side Mount Displacer Models

DESIGN TYPE

| | |
|-----|--|
| P68 | Side mount in tank, carbon steel body, 316 SS float and trim |
|-----|--|

SPECIFIC GRAVITY AND PROCESS TEMPERATURE

| | |
|-------------------|-------------------------------|
| +400° F (+200° C) | maximum temperature |
| 2 | 0.60 minimum specific gravity |

TANK CONNECTION SIDE MOUNTING CONNECTION TYPE


| ANSI Head Flange rating | | | | |
|-------------------------|------------|------------|-------------------------|------|
| NPT ^① | RF 150 lbs | RF 300 lbs | RF 600 lbs ^① | Size |
| F2A | N/A | N/A | N/A | 3" |
| N/A | H3A | H4A | H5A | 4" |

^① Maximum pressure rating is limited to 800 psig @ 100° F due to float.

PNEUMATIC INSTRUMENT

Single Function Heads for P68 model only

| Direct Acting | Reverse Acting | | | |
|---------------|----------------|----------------------|-----------|----------|
| Std | Std | Function | Output | Mounting |
| PAJ | PEJ | Proportional | 3–15 psig | Integral |
| PAK | PEK | Proportional | 6–30 psig | Integral |
| PBJ | PFJ | Proportional w/reset | 3–15 psig | Integral |
| PBK | PFK | Proportional w/reset | 6–30 psig | Integral |
| PCJ | PGJ | Transmitter | 3–15 psig | Integral |
| PCK | PGK | Transmitter | 6–30 psig | Integral |
| PDJ | PHJ | Differential Gap | 0–20 psig | Integral |
| PDK | PHK | Differential Gap | 0–35 psig | Integral |



complete order code for Side Mount
Pneumatic Module level

3.4 Model Numbers

3.4.5 APM Pneumatic Control Models

DESIGN TYPE


| | |
|-----|---------------------------------|
| APM | Pneumatic Liquid Level Controls |
|-----|---------------------------------|

MOUNTING AND MATERIALS OF CONSTRUCTION

| Model Code | Output Signal | Mounting Arrangement | Body Material | Maximum Pressure | Maximum Temperature | Minimum S.G. | Displacer Size |
|------------|---------------|----------------------|---------------|-------------------|---------------------|--------------|----------------|
| 131L | 3-15 | Top | Carbon steel | 230 psig (16 bar) | +250° F (+120° C) | 0.90 | 2" x 14" |
| 131H | 6-30 | Top | Carbon steel | 230 psig (16 bar) | +250° F (+120° C) | 0.90 | 2" x 14" |
| W251 | 3-15 6-30 | External Flange Cage | Cast iron | 250 lb. WSP | +406° F (+208° C) | 0.86 | 2.5" x 9" |
| W254 | 3-15 6-30 | External Flange Cage | Cast iron | 250 lb. WSP | +406° F (+208° C) | 0.86 | 2" x 12" |
| W291 | 3-15 6-30 | External Flange Cage | Carbon steel | 300 lb. WSP | +422° F (+217° C) | 0.85 | 2" x 12" |

PNEUMATIC INSTRUMENT

| Function | Pressure psig | Single Function Models | | | |
|--------------|---------------|------------------------|------------------|----------------|------------------|
| | | Direct Acting | | Reverse Acting | |
| | | Standard Head | w/Limit Switches | Standard Head | w/Limit Switches |
| Proportional | 3-15 | PAA | PIA | PEA | PMA |
| | 6-30 | PAB | PIB | PEB | PMB |



Service Policy

Owners of Magnetrol/STI controls may request the return of a control or any part of a control for complete rebuilding or replacement. They will be rebuilt or replaced promptly. Controls returned under our service policy must be returned by Prepaid transportation. Magnetrol/STI will repair or replace the control at no cost to the purchaser (or owner) other than transportation if:

1. Returned within the warranty period; and
2. The factory inspection finds the cause of the claim to be covered under the warranty.

If the trouble is the result of conditions beyond our control; or, is NOT covered by the warranty, there will be charges for labor and the parts required to rebuild or replace the equipment.

In some cases it may be expedient to ship replacement parts; or, in extreme cases a complete new control, to replace the original equipment before it is returned. If this is desired, notify the factory of both the model and serial numbers of the control to be replaced. In such cases, credit for the materials returned will be determined on the basis of the applicability of our warranty.

No claims for misapplication, labor, direct or consequential damage will be allowed.

Return Material Procedure

So that we may efficiently process any materials that are returned, it is essential that a "Return Material Authorization" (RMA) number be obtained from the factory, prior to the material's return. This is available through Magnetrol's or STI's local representative or by contacting the factory. Please supply the following information:

1. Company Name
2. Description of Material
3. Serial Number
4. Reason for Return
5. Application

Any unit that was used in a process must be properly cleaned in accordance with OSHA standards, before it is returned to the factory.

A Material Safety Data Sheet (MSDS) must accompany material that was used in any media.

All shipments returned to the factory must be by prepaid transportation.

All replacements will be shipped F.O.B. factory.



5300 Belmont Road • Downers Grove, Illinois 60515-4499 • 630-969-4000 • Fax 630-969-9489 • www.magnetrol.com
145 Jardin Drive, Units 1 & 2 • Concord, Ontario Canada L4K 1X7 • 905-738-9600 • Fax 905-738-1306
Heikensstraat 6 • B 9240 Zele, Belgium • 052 45.11.11 • Fax 052 45.09.93
Regent Business Ctr., Jubilee Rd. • Burgess Hill, Sussex RH15 9TL U.K. • 01444-871313 • Fax 01444-871317



5300 Belmont Road • Downers Grove, Illinois 60515-4499 • 630-969-4028 • Fax 630-969-9489 • www.sticontrols.com

Copyright © 2006 Magnetrol International, Incorporated. All rights reserved. Printed in the USA.
Magnetrol and Magnetrol logotype are registered trademarks of Magnetrol International.
STI and STI logotype are registered trademarks of Magnetrol International.

Performance specifications are effective with date of issue and are subject to change without notice.

Viton® is a registered trademark of DuPont Performance Elastomers.

BULLETIN: 48-620.14
EFFECTIVE: May 2006
SUPERSEDES: 48-620.13, March 2003
48-630.8, August 2004

NOS IMPLANTATIONS



ILE-DE-FRANCE
85 ROUTE DE GRIGNY
91136 RIS ORANGIS
• TÉL. 01 69 25 91 21
• FAX. 01 69 25 98 60
• p.besse@groupe-tc.com


HAUTE NORMANDIE
SDM THERMIQUE ET CONTRÔLE
22 RUE DES PÂTIS - BP 292
76143 LE PETIT-QUEVILLY CEDEX
• TÉL. 02 32 81 87 87
• FAX. 02 32 81 87 88
• gtdot@groupe-tc.com

HAUTE NORMANDIE
SDM PORTE OcéANE
192 RUE DE LA VALLÉE
76600 LE HAVRE
• TÉL. 02 35 24 40 55
• FAX. 02 35 53 31 06
• b.duhamel@groupe-tc.com

NORD PAS DE CALAIS
SDM NORD INSTRUMENTATION
RUE DES FAMARDS - BP 224
59812 LESQUIN CEDEX
• TÉL. 03 20 18 08 40
• FAX. 03 20 18 08 41
• p.carnoy@groupe-tc.com

GROUPE
THERMIQUE & CONTRÔLE

www.groupe-tc.com

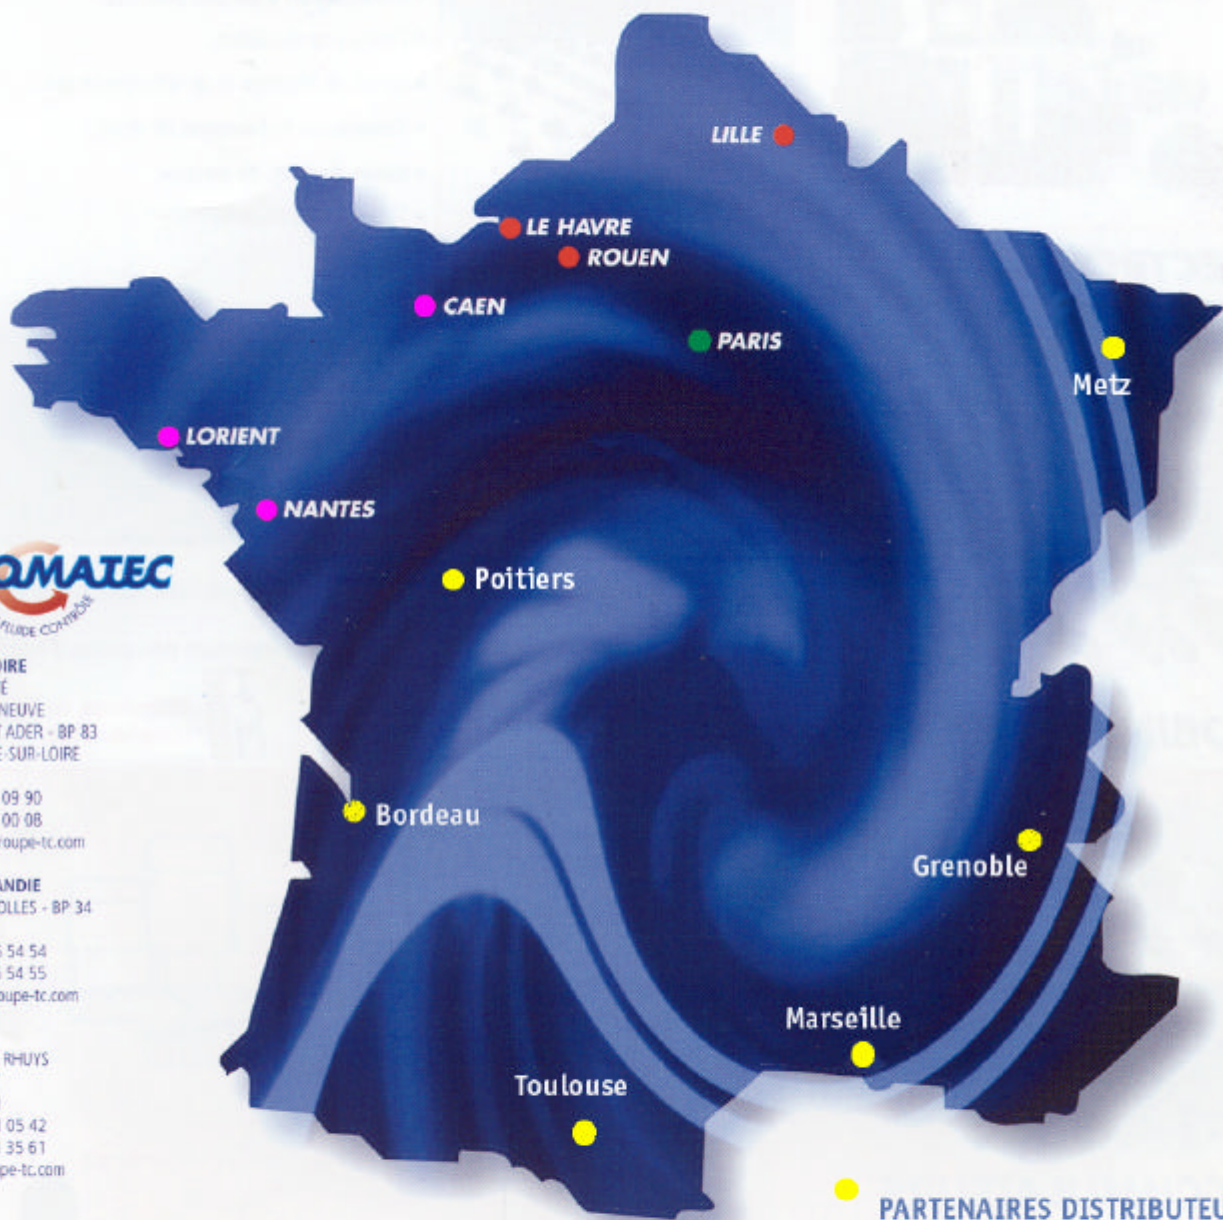

PAYS DE LA LOIRE
ZONE D'ACTIVITÉ
DE LA MAISON NEUVE
6 RUE CLÉMENT ADER - BP 83
44984 STE LUCE-SUR-LOIRE
CEDEX
• TÉL. 02 51 85 09 90
• FAX. 02 51 85 00 08
• automatec@groupe-tc.com



BASSE NORMANDIE
9 RUE DE BRÉHOLLES - BP 34
14540 SOLIERS
• TÉL. 02 31 15 54 54
• FAX. 02 31 15 54 55
• g.guilbert@groupe-tc.com

BRETAGNE
159 IMPASSE A. RHIUYS
ZI DE KERPONT
56850 CAUDAN
• TÉL. 02 97 81 05 42
• FAX. 02 97 81 35 61
• s.barille@groupe-tc.com

PARTENAIRES DISTRIBUTEURS

NOS PARTENAIRES

MESURE • RÉGULATION



PNEUMATIQUE



HYDRAULIQUE



ROBINETTERIE

